

INDUSTRIAL MACHINERY MONITORING PRODUCT

21500-00-32-05-02

Industrial Monitoring Component

Bently Nevada 21500-00-32-05-02 is an industrial monitoring component identified by the complete order code shown on the installed item and service record.

IDENTITY	VERIFIED VALUE
Manufacturer	Bently Nevada
Product	Industrial Monitoring Component
Model	21500-00-32-05-02
Family	Bently Nevada machinery monitoring
Country of origin	USA

DOCUMENT SCOPE

Exact model identity, supported configuration data, installation checks, applications, precautions and controlled acceptance records.

MODEL-SPECIFIC ENGINEERING NOTE

Record the full 21500-00-32-05-02 marking, installed position, mating hardware, cable and termination details before disturbance. Obtain Bently Nevada confirmation before substitution or recommissioning.

APTER POWER SALES TEAM

WHATSAPP / PHONE +86 180 3023 5313
EMAIL sales13@apterpower.com
WEBSITE www.apterpower.com



21500-00-32-05-02

Verified Product Record

PARAMETER	VERIFIED VALUE
Manufacturer	Bently Nevada
Order identity	21500-00-32-05-02

Installation Boundary

ENGINEERING BOUNDARY

Record the full 21500-00-32-05-02 marking, installed position, mating hardware, cable and termination details before disturbance. Obtain Bently Nevada confirmation before substitution or recommissioning.

CHECK	REQUIRED RECORD
Identity	21500-00-32-05-02
Installed arrangement	Position, mating hardware, cable and termination
Configuration	Associated module or monitor channel
Acceptance	Diagnostics and controlled functional proof

SOURCE BOUNDARY

Baker Hughes / Bently Nevada product support. Apply only the exact ordering-code values shown in this document and verify the installed marking before work.

System Role and Verification

Bently Nevada 21500-00-32-05-02 is an industrial monitoring component identified by the complete order code shown on the installed item and service record.

IDENTITY
Record 21500-00-32-05-02 from the physical marking.

INTERFACE
Document every mating part, connector and cable before disturbance.

CONFIGURATION
Confirm the associated system and channel using manufacturer records.

ACCEPTANCE
Restore the documented arrangement and prove operation before release.

Controlled Installation Checklist

NO.	CHECK
1	Verify 21500-00-32-05-02 from the physical marking before work.
2	Do not infer dimensions, electrical values or approvals from a nearby model.
3	Photograph and record the installed position and mating hardware before removal.
4	Label every conductor, connector and cable route before disconnection.
5	Ask Bently Nevada support to confirm any proposed replacement or compatibility claim.
6	Restore the documented arrangement and complete a controlled functional test before release.

Applications and Model-Specific FAQ

INSTALLED-BASE MAINTENANCE

Maintains a controlled record for the exact installed order identity.

PLANNED REPLACEMENT VERIFICATION

Supports manufacturer confirmation before any substitute is accepted.

OUTAGE INSPECTION RECORDS

Captures mounting, cabling and termination evidence before disturbance.

CONTROLLED RECOMMISSIONING

Links restored identity and connections to the final functional test.

QUESTION	ANSWER
What nameplate check is required for 21500-00-32-05-02?	Match the complete order code to the installed nameplate and maintenance record.
What outage preparation is required for 21500-00-32-05-02?	Document access, mounting, connections and the associated monitoring channel before disturbance.
What cable identification is required for 21500-00-32-05-02?	Tag both ends of every affected cable and record its route.
What interface record is required for 21500-00-32-05-02?	Record mating parts, fasteners and terminal or connector positions.
What substitution control is required for 21500-00-32-05-02?	Obtain Bently Nevada confirmation for any proposed substitute.
What as-found photographs is required for 21500-00-32-05-02?	Retain clear images of the marking, position and connections.
What recommissioning record is required for 21500-00-32-05-02?	Retain identity, connection, diagnostic and functional-acceptance results.
What listed origin is required for 21500-00-32-05-02?	The current publishing instruction specifies USA.

Precautions and Related Products

NO.	PRECAUTION
1	Verify 21500-00-32-05-02 from the physical marking before work.
2	Do not infer dimensions, electrical values or approvals from a nearby model.
3	Photograph and record the installed position and mating hardware before removal.
4	Label every conductor, connector and cable route before disconnection.
5	Ask Bently Nevada support to confirm any proposed replacement or compatibility claim.
6	Restore the documented arrangement and complete a controlled functional test before release.

Related Bently Nevada Products on Apter Power

MODEL	RELATION	APTER POWER PAGE
330101-30-63-15-02-CN	Bently Nevada machinery-monitoring component	View 330101-30-63-15-02-CN
330101-00-18-10-02-00	Bently Nevada machinery-monitoring component	View 330101-00-18-10-02-00
330102-00-40-10-01-05	Bently Nevada machinery-monitoring component	View 330102-00-40-10-01-05
330102-00-40-05-01-00	Bently Nevada machinery-monitoring component	View 330102-00-40-05-01-00
330102-00-80-10-11-05	Bently Nevada machinery-monitoring component	View 330102-00-80-10-11-05
330103-00-12-10-01-00	Bently Nevada machinery-monitoring component	View 330103-00-12-10-01-00
330103-00-10-10-12-05	Bently Nevada machinery-monitoring component	View 330103-00-10-10-12-05
330103-12-25-10-01-00	Bently Nevada machinery-monitoring component	View 330103-12-25-10-01-00

MANUFACTURER SOURCE RECORD

Bently Nevada Product Support
Baker Hughes / Bently Nevada product support

APTER POWER SALES TEAM

WHATSAPP / PHONE +86 180 3023 5313
EMAIL sales13@apterpower.com
WEBSITE www.apterpower.com



21500-00-32-05-02