



ControlLogix DC Digital I/O Modules

Standard Catalog Numbers: 1756-IB16, 1756-IB16D, 1756-IB16I, 1756-IB16IF, 1756-IB16ISOE, 1756-IB32, 1756-IC16, 1756-IG16, 1756-IH16I, 1756-IH16ISOE, 1756-IV16, 1756-IV32, 1756-LSC8XIB8I, 1756-OB8, 1756-OB8K, 1756-OB8EI, 1756-OB16D, 1756-OB16E, 1756-OB16I, 1756-OB16IEF, 1756-OB16IEFS, 1756-OB16IS, 1756-OB32, 1756-OC8, 1756-OG16, 1756-OH8I, 1756-OV16E, 1756-OV32E

Harsh Environment Catalog Numbers: 1756-IB16K, 1756-IB16DK, 1756-IB16IK, 1756-IB16IFK, 1756-IB16ISOEK, 1756-IB32K, 1756-IG16K, 1756-IH16IK, 1756-IH16ISOEK, 1756-IV16K, 1756-IV32K, 1756-LSC8XIB8IK, 1756-OB8EIK, 1756-OB16DK, 1756-OB16EK, 1756-OB16IK, 1756-OB16IEFK, 1756-OB16IEFSK, 1756-OB32K, 1756-OC8K, 1756-OG16K, 1756-OV32EK
1756-IB16XT, 1756-IB32XT, 1756-OB32XT

Topic	Page
Summary of Changes	1
Installation Requirements	5
Install the Module	5
Key the Removable Terminal Block (RTB)	5
Connect the Wiring	5
Assemble the RTB and Housing	6
Install the RTB	6
RTB Ratings	6
Specifications	7
Additional Resources	11

ControlLogix® digital I/O modules are input and output modules that provide On/Off detection and actuation. By using the Producer/Consumer network model, digital I/O modules can produce information when needed while providing additional system functions.

ControlLogix modules with a 'K' or an 'XT' in the catalog number are conformal coated for extended protection in harsh, corrosive environments.

Summary of Changes

This publication contains new and updated information as indicated in the following table.

Topic	Page
Added ControlLogix-ZXT chassis installation information	5
Corrected RTB Ratings information	6
Added new catalogs, 1756-IB16XT, 1756-IB32XT, and 1756-OB32XT	Throughout
Added ControlLogix-XT RTB information	Throughout



ATTENTION: Read this document and the documents listed in the Additional Resources section about installation, configuration and operation of this equipment before you install, configure, operate or maintain this product. Users are required to familiarize themselves with installation and wiring instructions in addition to requirements of all applicable codes, laws, and standards.

Activities including installation, adjustments, putting into service, use, assembly, disassembly, and maintenance are required to be carried out by suitably trained personnel in accordance with applicable code of practice. If this equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.

注意：在安装、配置、操作和维护本产品前，请阅读本文档以及“其他资源”部分列出的有关设备安装、配置和操作的相应文档。除了所有适用规范、法律和标准的相关要求之外，用户还必须熟悉安装和接线说明。

安装、调整、投运、使用、组装、拆卸和维护等各项操作必须由经过适当训练的专业人员按照适用的操作规范实施。

如果未按照制造商指定的方式使用该设备，则可能会损害设备提供的保护。

ATENCIÓN: Antes de instalar, configurar, poner en funcionamiento o realizar el mantenimiento de este producto, lea este documento y los documentos listados en la sección Recursos adicionales acerca de la instalación, configuración y operación de este equipo. Los usuarios deben familiarizarse con las instrucciones de instalación y cableado y con los requisitos de todos los códigos, leyes y estándares vigentes.

El personal debidamente capacitado debe realizar las actividades relacionadas a la instalación, ajustes, puesta en servicio, uso, ensamblaje, desensamblaje y mantenimiento de conformidad con el código de práctica aplicable. Si este equipo se usa de una manera no especificada por el fabricante, la protección provista por el equipo puede resultar afectada.

ATENÇÃO: Leia este e os demais documentos sobre instalação, configuração e operação do equipamento que estão na seção Recursos adicionais antes de instalar, configurar, operar ou manter este produto. Os usuários devem se familiarizar com as instruções de instalação e fiação além das especificações para todos os códigos, leis e normas aplicáveis.

É necessário que as atividades, incluindo instalação, ajustes, colocação em serviço, utilização, montagem, desmontagem e manutenção sejam realizadas por pessoal qualificado e especializado, de acordo com o código de prática aplicável.

Caso este equipamento seja utilizado de maneira não estabelecida pelo fabricante, a proteção fornecida pelo equipamento pode ficar prejudicada.

ВНИМАНИЕ: Перед тем как устанавливать, настраивать, эксплуатировать или обслуживать данное оборудование, прочитайте этот документ и документы, перечисленные в разделе «Дополнительные ресурсы». В этих документах изложены сведения об установке, настройке и эксплуатации данного оборудования. Пользователи обязаны ознакомиться с инструкциями по установке и прокладке соединений, а также с требованиями всех применимых норм, законов и стандартов.

Все действия, включая установку, наладку, ввод в эксплуатацию, использование, сборку, разборку и техническое обслуживание, должны выполняться обученным персоналом в соответствии с применимыми нормами и правилами.

Если оборудование используется не предусмотренным производителем образом, защита оборудования может быть нарушена.

注意：本製品を設置、構成、稼働または保守する前に、本書および本機器の設置、設定、操作についての参考資料の該当箇所に記載されている文書に目を通してください。ユーザは、すべての該当する条例、法律、規格の要件に加えて、設置および配線の手順に習熟している必要があります。

設置調整、運転の開始、使用、組立て、解体、保守を含む諸作業は、該当する実施規則に従って訓練を受けた適切な作業員が実行する必要があります。

本機器が製造メーカーにより指定されていない方法で使用されている場合、機器により提供されている保護が損なわれる恐れがあります。

ACHTUNG: Lesen Sie dieses Dokument und die im Abschnitt „Weitere Informationen“ aufgeführten Dokumente, die Informationen zu Installation, Konfiguration und Bedienung dieses Produkts enthalten, bevor Sie dieses Produkt installieren, konfigurieren, bedienen oder warten. Anwender müssen sich neben den Bestimmungen aller anwendbaren Vorschriften, Gesetze und Normen zusätzlich mit den Installations- und Verdrahtungsanweisungen vertraut machen.

Arbeiten im Rahmen der Installation, Anpassung, Inbetriebnahme, Verwendung, Montage, Demontage oder Instandhaltung dürfen nur durch ausreichend geschulte Mitarbeiter und in Übereinstimmung mit den anwendbaren Ausführungsvorschriften vorgenommen werden.

Wenn das Gerät in einer Weise verwendet wird, die vom Hersteller nicht vorgesehen ist, kann die Schutzfunktion beeinträchtigt sein.

ATTENTION : Lisez ce document et les documents listés dans la section Ressources complémentaires relatifs à l'installation, la configuration et le fonctionnement de cet équipement avant d'installer, configurer, utiliser ou entretenir ce produit. Les utilisateurs doivent se familiariser avec les instructions d'installation et de câblage en plus des exigences relatives aux codes, lois et normes en vigueur. Les activités relatives à l'installation, le réglage, la mise en service, l'utilisation, l'assemblage, le démontage et l'entretien doivent être réalisées par des personnes formées selon le code de pratique en vigueur.

Si cet équipement est utilisé d'une façon qui n'a pas été définie par le fabricant, la protection fournie par l'équipement peut être compromise.

주의：본 제품 설치, 설정, 작동 또는 유지 보수하기 전에 본 문서를 포함하여 설치, 설정 및 작동에 관한 참고 자료 섹션의 문서들을 반드시 읽고 숙지하십시오. 사용자는 모든 관련 규정, 법규 및 표준에서 요구하는 사항에 대해 반드시 설치 및 배선 지침을 숙지해야 합니다.

설치, 조정, 가동, 사용, 조립, 분해, 유지보수 등 모든 작업은 관련 규정에 따라 적절한 교육을 받은 사용자가 통해서만 수행해야 합니다.

본 장비를 제조사가 명시하지 않은 방법으로 사용하면 장비의 보호 기능이 손상될 수 있습니다.

ATTENZIONE Prima di installare, configurare ed utilizzare il prodotto, o effettuare interventi di manutenzione su di esso, leggere il presente documento ed i documenti elencati nella sezione "Altre risorse", riguardanti l'installazione, la configurazione ed il funzionamento dell'apparecchiatura. Gli utenti devono leggere e comprendere le istruzioni di installazione e cablaggio, oltre ai requisiti previsti dalle leggi, codici e standard applicabili.

Le attività come installazione, regolazioni, utilizzo, assemblaggio, disassemblaggio e manutenzione devono essere svolte da personale adeguatamente addestrato, nel rispetto delle procedure previste. Qualora l'apparecchio venga utilizzato con modalità diverse da quanto previsto dal produttore, la sua funzione di protezione potrebbe venire compromessa.

DIKKAT: Bu ürünün kurulumu, yapılandırılması, işletilmesi veya bakımı öncesinde bu dokümanı ve bu ekipmanın kurulumu, yapılandırılması ve işletimi ile ilgili Kaynaklar bölümünde yer listelenmiş dokümanları okuyun. Kullanıcılar yürürlükteki tüm yönetmelikler, yasalar ve standartların gereksinimlerine ek olarak kurulum ve kablolama talimatlarını da öğrenmek zorundadır.

Kurulum, ayarlama, hizmete alma, kullanma, parçaları birleştirme, parçaları sökme ve bakım gibi aktiviteler sadece uygun eğitimleri almış kişiler tarafından yürürlükteki uygulama yönetmeliklerine uygun şekilde yapılabilir.

Bu ekipman üretici tarafından belirlenmiş amacın dışında kullanılırsa, ekipman tarafından sağlanan koruma bozulabilir.

注意事項：在安装、設定、操作或維護本產品前，請先閱讀此文件以及列於「其他資源」章節中有關安裝、設定與操作此設備的文件。使用者必須熟悉安裝和配線指示，並符合所有法規、法律和標準要求。

包括安裝、調整、交付使用、使用、組裝、拆卸和維護等動作都必須交由已經過適當訓練的人員進行，以符合適用的實作法規。

如果將設備用於非製造商指定的用途時，可能會造成設備所提供的保護功能受損。

POZOR: Než začnete instalovat, konfigurovat či provozovat tento výrobek nebo provádět jeho údržbu, přečtěte si tento dokument a dokumenty uvedené v části Dodatečné zdroje ohledně instalace, konfigurace a provozu tohoto zařízení. Uživatelé se musejí vedle požadavků všech relevantních vyhlášek, zákonů a norem nutně seznámit také s pokyny pro instalaci a elektrické zapojení.

Činnosti zahrnující instalaci, nastavení, uvedení do provozu, užívání, montáž, demontáž a údržbu musí vykonávat vhodně proškolený personál v souladu s příslušnými prováděcími předpisy.

Pokud se toto zařízení používá způsobem neodpovídajícím specifikaci výrobce, může být narušena ochrana, kterou toto zařízení poskytuje.

UWAGA: Przed instalacją, konfiguracją, użytkowaniem lub konserwacją tego produktu należy przeczytać niniejszy dokument oraz wszystkie dokumenty wymienione w sekcji Dodatkowe źródła omawiające instalację, konfigurację i procedury użytkowania tego urządzenia. Użytkownicy mają obowiązek zapoznać się z instrukcjami dotyczącymi instalacji oraz oprzewodowania, jak również z obowiązującymi kodeksami, prawem i normami.

Działania obejmujące instalację, regulację, przekazanie do użytkowania, użytkowanie, montaż, demontaż oraz konserwację muszą być wykonywane przez odpowiednio przeszkolony personel zgodnie z obowiązującym kodeksem postępowania.

Jeśli urządzenie jest użytkowane w sposób inny niż określony przez producenta, zabezpieczenie zapewniane przez urządzenie może zostać ograniczone.

OBBS! Läs detta dokument samt dokumentet, som står listat i avsnittet Övriga resurser, om installation, konfigurering och drift av denna utrustning innan du installerar, konfigurerar eller börjar använda eller utföra underhållsarbete på produkten. Användare måste bekanta sig med instruktioner för installation och kabeldragning, förutom krav enligt gällande koder, lagar och standarder.

Åtgärder som installation, justering, service, användning, montering, demontering och underhållsarbete måste utföras av personal med lämplig utbildning enligt lämpligt bruk.



Om denna utrustning används på ett sätt som inte anges av tillverkaren kan det hända att utrustningens skyddsanordningar försätts ur funktion.

LET OP: Lees dit document en de documenten die genoemd worden in de paragraaf Aanvullende informatie over de installatie, configuratie en bediening van deze apparatuur voordat u dit product installeert, configureert, bedient of onderhoudt. Gebruikers moeten zich vertrouwd maken met de installatie en de bedringsinstructies, naast de vereisten van alle toepasselijke regels, wetten en normen.


Activiteiten zoals het installeren, afstellen, in gebruik stellen, gebruiken, monteren, demonteren en het uitvoeren van onderhoud mogen uitsluitend worden uitgevoerd door hiervoor opgeleid personeel en in overeenstemming met de geldende praktijkregels.

Indien de apparatuur wordt gebruikt op een wijze die niet is gespecificeerd door de fabrikant, dan bestaat het gevaar dat de beveiliging van de apparatuur niet goed werkt.

North American Hazardous Location Approval

The following information applies when operating this equipment in hazardous locations.	Informations sur l'utilisation de cet équipement en environnements dangereux.
<p>Products marked "CL I, DIV 2, GP A, B, C, D" are suitable for use in Class I Division 2 Groups A, B, C, D, Hazardous Locations and nonhazardous locations only. Each product is supplied with markings on the rating nameplate indicating the hazardous location temperature code. When combining products within a system, the most adverse temperature code (lowest "T" number) may be used to help determine the overall temperature code of the system. Combinations of equipment in your system are subject to investigation by the local Authority Having Jurisdiction at the time of installation.</p>	<p>Les produits marqués "CL I, DIV 2, GP A, B, C, D" ne conviennent qu'à une utilisation en environnements de Classe I Division 2 Groupes A, B, C, D dangereux et non dangereux. Chaque produit est livré avec des marquages sur sa plaque d'identification qui indiquent le code de température pour les environnements dangereux. Lorsque plusieurs produits sont combinés dans un système, le code de température le plus défavorable (code de température le plus faible) peut être utilisé pour déterminer le code de température global du système. Les combinaisons d'équipements dans le système sont sujettes à inspection par les autorités locales qualifiées au moment de l'installation.</p>
 <p>WARNING: Explosion Hazard -</p> <ul style="list-style-type: none"> Do not disconnect equipment unless power has been removed or the area is known to be nonhazardous. Do not disconnect connections to this equipment unless power has been removed or the area is known to be nonhazardous. Secure any external connections that mate to this equipment by using screws, sliding latches, threaded connectors, or other means provided with this product. Substitution of components may impair suitability for Class I, Division 2. If this product contains batteries, they must only be changed in an area known to be nonhazardous. 	 <p>AVERTISSEMENT: Risque d'Explosion -</p> <ul style="list-style-type: none"> Couper le courant ou s'assurer que l'environnement est classé non dangereux avant de débrancher l'équipement. Couper le courant ou s'assurer que l'environnement est classé non dangereux avant de débrancher les connecteurs. Fixer tous les connecteurs externes reliés à cet équipement à l'aide de vis, loquets coulissants, connecteurs filetés ou autres moyens fournis avec ce produit. La substitution de composants peut rendre cet équipement inadapté à une utilisation en environnement de Classe I, Division 2. S'assurer que l'environnement est classé non dangereux avant de changer les piles.

UK and European Hazardous Location Approval

<p>The following applies to products marked  , II 3 G. Such modules:</p> <ul style="list-style-type: none"> Are Equipment Group II, Equipment Category 3, and comply with the Essential Health and Safety Requirements relating to the design and construction of such equipment given in Annex II to EU Directive 2014/34/EU and Schedule 1 of the UKEX Regulation 2016 No. 1107. See the UKEX and EU Declaration of Conformity at rok.auto/certifications for details. The type of protection for the catalog numbers 1756-IB16 and 1756-IB16D is Ex ec IIC T3 Gc. Equipment protection by increased safety "e". The type of protection for the catalog numbers 1756-OB32, 1756-OB16E, 1756-IB16I, 1756-IB16IF, 1756-IB16ISOE, 1756-IB32, 1756-IC16, 1756-IG16, 1756-IV16, 1756-IV32, 1756-LSC8XI8I, 1756-OB8, 1756-OB8EI, 1756-OB16D, 1756-OB16I, 1756-OB16IEF, 1756-OB16IEFS, 1756-OB16IS, 1756-OC8, 1756-OG16, 1756-OV16E, and 1756-OV32E is Ex ec IIC T4 Gc. Equipment protection by increased safety "e". Equipment protection by increased safety "e", reference certificate number UL22ATEX2820X and UL22UKEX2602X. Are intended for use in areas in which explosive atmospheres caused by gases, vapors, mists, or air are unlikely to occur, or are likely to occur only infrequently and for short periods. Such locations correspond to Zone 2 classification according to UKEX Regulation 2016 No. 1107 and ATEX directive 2014/34/EU. Can have catalog numbers followed by a 'K' or an 'XT' to indicate a conformal coating option.

IEC Hazardous Location Approval

<p>The following applies to products with IECEx certification. Such modules:</p> <ul style="list-style-type: none"> Are intended for use in areas in which explosive atmospheres caused by gases, vapors, mists, or air are unlikely to occur, or are likely to occur only infrequently and for short periods. Such locations correspond to Zone 2 classification. The type of protection for the catalog numbers 1756-IB16 and 1756-IB16D is Ex ec IIC T3 Gc. Equipment protection by increased safety "e". The type of protection for the catalog numbers 1756-OB32, 1756-OB16E, 1756-IB16I, 1756-IB16IF, 1756-IB16ISOE, 1756-IB32, 1756-IC16, 1756-IG16, 1756-IV16, 1756-IV32, 1756-LSC8XI8I, 1756-OB8, 1756-OB8EI, 1756-OB16D, 1756-OB16I, 1756-OB16IEF, 1756-OB16IEFS, 1756-OB16IS, 1756-OC8, 1756-OG16, 1756-OV16E, and 1756-OV32E is Ex ec IIC T4 Gc. Equipment protection by increased safety "e". IECEx certificate number IECEx UL 22.0065X. Can have catalog numbers followed by a 'K' or an 'XT' to indicate a conformal coating option.
--



ATTENTION: Before installing, configuring, operating, or maintaining this product, read this document and the documents listed in the additional resources section for installing, configuring, or operating equipment. Users should familiarize themselves with installation and wiring instructions in addition to requirements of all applicable codes, laws, and standards.

This equipment is certified for use only within the surrounding air temperature range of 0...60 °C (32...140 °F). The equipment must not be used outside of this range.

Installation, adjustments, putting into service, use, assembly, disassembly, and maintenance shall be carried out by suitably trained personnel in accordance with applicable code of practice.

In case of malfunction or damage, make no attempt at repair. Return the module to the manufacturer for repair. Do not dismantle the module.

Use only a soft dry anti-static cloth to wipe down equipment. Do not use any cleaning agents.

IMPORTANT Any illustrations, charts, sample programs, and layout examples that are shown in this publication are intended solely for the purposes of example. Since there are many variables and requirements associated with any particular installation, Rockwell Automation does not assume responsibility or liability for actual use based on the examples shown in this publication.

Environment and Enclosure



ATTENTION: This equipment is intended for use in a Pollution Degree 2 industrial environment, in overvoltage Category II applications (as defined in EN/IEC 60664-1), at altitudes up to 2000 m (6562 ft) without derating.

This equipment is not intended for use in residential environments and may not provide adequate protection to radio communication services in such environments.

This equipment is supplied as open-type equipment for indoor use. It must be mounted within an enclosure that is suitably designed for those specific environmental conditions that will be present and appropriately designed to prevent personal injury resulting from accessibility to live parts. The enclosure must have suitable flame-retardant properties to prevent or minimize the spread of flame, complying with a flame spread rating of 5VA or be approved for the application if nonmetallic. The interior of the enclosure must be accessible only by the use of a tool. Subsequent sections of this publication may contain additional information regarding specific enclosure type ratings that are required to comply with certain product safety certifications.

In addition to this publication, see the following:

- Industrial Automation Wiring and Grounding Guidelines, publication [1770-4.1](#), for additional installation requirements.
- NEMA Standard 250 and EN/IEC 60529, as applicable, for explanations of the degrees of protection provided by different types of enclosure.

Prevent Electrostatic Discharge



ATTENTION: This equipment is sensitive to electrostatic discharge, which can cause internal damage and affect normal operation. Follow these guidelines when you handle this equipment:

- Touch a grounded object to discharge potential static.
- Wear an approved grounding wriststrap.
- Do not touch connectors or pins on component boards.
- Do not touch circuit components inside the equipment.
- Use a static-safe workstation, if available.
- Store the equipment in appropriate static-safe packaging when not in use.

Module Removal and Insertion Under Power (RIUP)



WARNING: When you insert or remove the module while backplane power is on, an electric arc can occur. This could cause an **explosion** in hazardous location installations.

Be sure that power is removed or the area is nonhazardous before proceeding. Repeated electric arcing causes excessive wear to contacts on both the module and its mating connector. Worn contacts can create electrical resistance that can affect module operation.

Removable Terminal Block (RTB) Removal and Insertion Under Power (RIUP)



WARNING: When you connect or disconnect the removable terminal block (RTB) with field-side power applied, an electric arc can occur. This could cause an **explosion** in hazardous location installations.

Be sure that power is removed or the area is nonhazardous before proceeding.

Special Conditions for Safe Use



WARNING:

- This equipment is not resistant to sunlight or other sources of UV radiation.
- This equipment shall be mounted in an UKEX/ATEX/IECEx Zone 2 certified enclosure with a minimum ingress protection rating of at least IP54 (in accordance with EN/IEC 60079-0) and used in an environment of not more than Pollution Degree 2 (as defined in EN/IEC 60664-1) when applied in Zone 2 environments. The enclosure must be accessible only by the use of a tool.
- This equipment shall be used within its specified ratings defined by Rockwell Automation.
- Transient protection shall be provided that is set at a level not exceeding 140% of the peak rated voltage at the supply terminals to the equipment.
- The instructions in the user manual shall be observed.
- This equipment must be used only with UKEX/ATEX/IECEx certified Rockwell Automation backplanes.
- Secure any external connections that mate to this equipment by using screws, sliding latches, threaded connectors, or other means provided with this product.
- Do not disconnect equipment unless power has been removed or the area is known to be nonhazardous.

Installation Requirements

Before you install the module, you must complete these steps.

1. Install a 1756 ControlLogix, ControlLogix-XT™, or ControlLogix-ZXT chassis. See the ControlLogix Chassis Installation Instructions, publication [1756-IN621](#).
2. Install a 1756 ControlLogix or ControlLogix-XT power supply. See the ControlLogix Power Supply Installation Instructions, publication [1756-IN619](#), or the ControlLogix Redundant Power Supply Installation Instructions, publication [1756-IN620](#).

Install the Module



ATTENTION: The ControlLogix DC Digital I/O modules listed on [page 1](#) that end with an “XT” are shipped in packaging that provides a layer of protection from corrosive atmospheres. Once the factory packaging seal is broken, the module and the corresponding ControlLogix-XT Removable Terminal Block (RTB) must remain installed at all times, and the RTB door must remain closed, for the product to maintain its corrosive atmosphere rating. If maintenance is required, you can open the RTB door or remove the module or RTB. Close the RTB door or reinstall the module or RTB after temporary access is complete.

You can install or remove a module while chassis power is applied.



ATTENTION: The module is designed to support removal and insertion under power (RIUP). However, when you remove or insert an RTB with field-side power applied, unintended machine motion or loss of process control can occur. Exercise extreme caution when you use this feature. We recommend that field-side power be removed before installing the RTB onto the module.



SHOCK HAZARD: If the RTB is installed onto the module while the field-side power is applied, the RTB is electrically live. Do not touch the RTB's terminals. Failure to observe this caution may result in personal injury.


Follow these steps to install the module.

1. If you're using a ControlLogix-ZXT chassis, remove the backplane connector cover from the slot into which you're installing the module.



ATTENTION: ControlLogix-ZXT chassis are shipped with backplane connector covers installed to provide a layer of protection from corrosive atmospheres. Once the factory packaging seal is broken, these covers must remain installed in unused slots at all times for the chassis to maintain its corrosive atmosphere rating. If the module is later removed, reinstall a backplane connector cover in the vacated slot to maintain the corrosive atmosphere rating of the chassis.


2. Slide the module into the slot in the chassis until the locking tab clicks.

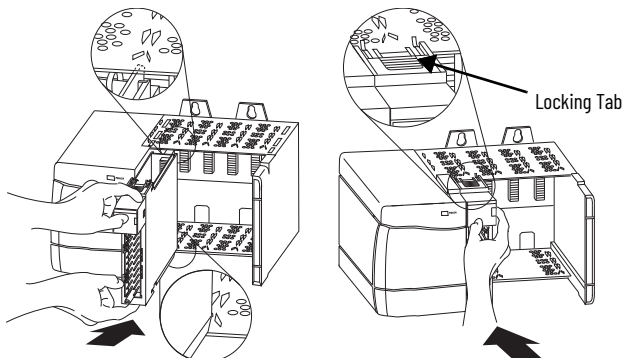

Key the Removable Terminal Block (RTB)

Key the RTB to help prevent inadvertently connecting the incorrect RTB to your module.

1. Push the U-shaped band onto the module until the band snaps into place.
2. Insert wedge-shaped tabs into positions on the RTB that correspond to unkeyed module positions on the module until they stop.

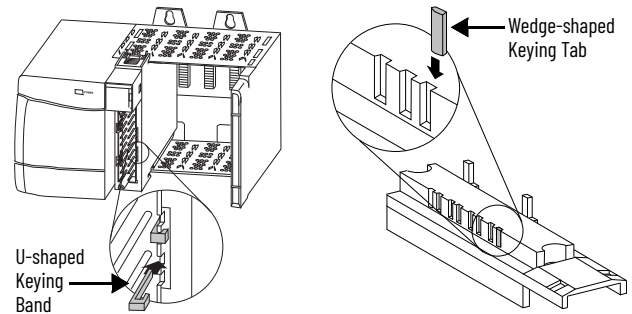

Connect the Wiring

You can use an RTB or a Bulletin 1492 prewired interface module (IFM) to connect wires to your module. If you are using an RTB, see [Recommendations for Wiring Your RTB](#). IFMs are prewired before shipping.



WARNING: If you connect or disconnect wiring while the field-side power is on, an electric arc can occur. This could cause an explosion in hazardous location installations. Be sure that power is removed or the area is nonhazardous before proceeding.



ATTENTION: If multiple power sources are used, do not exceed the specified isolation voltage.



ATTENTION: When using catalog number 1756-TBNH, 1756-TBNHXT, 1756-TBCH, or 1756-TBCHXT, do not wire more than one 0.33...2.1 mm² (22...14 AWG) or two 0.33...1.3 mm² (22...16 AWG) conductors on any terminal.

When using catalog number 1756-TBSH, 1756-TBSHXT, 1756-TBS6H, or 1756-TBS6HXT, do not wire more than one 0.33...2.1 mm² (22...14 AWG) conductor on any terminal.


Use only the same size wires with no intermixing of solid and stranded wire types.



ATTENTION: The ControlLogix system has been agency certified with the use of ControlLogix RTBs only. Any application that requires agency certification of the ControlLogix system by using other wiring termination methods may require application-specific approval by the certifying agency.


Wire a Cage Clamp-style RTB

1. Insert the wire into the terminal.
2. Turn the screw clockwise to close the terminal on the wire.

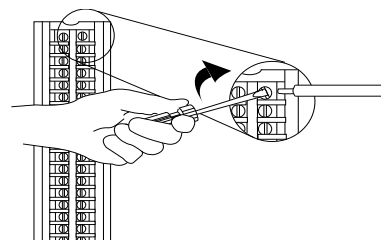

Wire a Spring Clamp

1. Insert the screwdriver into the outer hole of the RTB.
2. Insert the wire into the open terminal and remove the screwdriver.

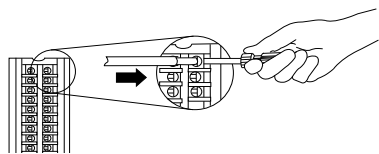

Recommendations for Wiring Your RTB


We recommend that you follow these guidelines when you wire your RTB:

- Wire the bottom terminals first and move up.
- Use a tie to secure the wires in the strain relief (bottom) area of the RTB.
- 3. Order and use an extended-depth housing (catalog number 1756-TBE or 1756-TBEXT) for applications that require heavy gauge wires.

Assemble the RTB and Housing

A removable housing covers the wired RTB to help protect wiring connections when the RTB is seated on the module.

1. Align the grooves at the bottom of each side of the housing with the side edges of the RTB.
2. Slide the RTB into the housing until it snaps into place.

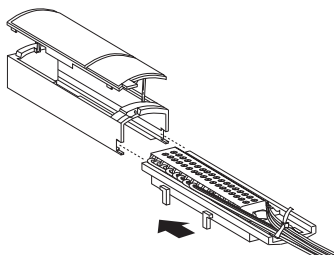

IMPORTANT If additional wire routing space is required, use the extended-depth housing, catalog number 1756-TBE or 1756-TBEXT.

IMPORTANT The housings shown are used with a spring clamp RTB, but the capacity remains the same, regardless of RTB type.

RTB Ratings

Module Catalog Number	RTB Catalog Number	RTB Type	Torque and Wire Size (Where Applicable)
1756-IB16, 1756-IB16K, 1756-IB16XT, 1756-IC16, 1756-IG16, 1756-IG16K, 1756-IH16I, 1756-IH16IK, 1756-IH16ISOE, 1756-IH16ISOEK, 1756-IV16, 1756-IV16K, 1756-OB8, 1756-OB8K, 1756-OB16E, 1756-OB16EK, 1756-OC8, 1756-OC8K, 1756-OG16, 1756-OG16K, 1756-OV16E	1756-TBNH, 1756-TBNHXT	<ul style="list-style-type: none"> • NEMA screw-clamp removable block • 20-pin 	1.36 N•m (12 lb•in) Single wire connection: 0.33...2.1 mm ² (22...14 AWG) solid or stranded copper wire rated at 105 °C (221 °F), or greater, 1.2 mm (3/64 in.) insulation max. Do not wire more than one conductors on any terminal. Double wire connection: 0.33...1.3 mm ² (22...16 AWG) solid or stranded copper wire rated at 105 °C (221 °F), or greater, 1.2 mm (3/64 in.) insulation max. Do not wire more than two conductors on any terminal.
	1756-TBSH, 1756-TBSHXT	<ul style="list-style-type: none"> • Spring-clamp removable terminal block with standard housing • 20-pin 	Single wire connection: 0.33...2.1 mm ² (22...14 AWG) solid or stranded copper wire rated at 105 °C (221 °F), or greater, 1.2 mm (3/64 in.) insulation max. Do not wire multiple conductors on any terminal.
1756-IB16D, 1756-IB16DK, 1756-IB16DXT, 1756-IB16I, 1756-IB16IK, 1756-IB16IXT, 1756-IB16IF, 1756-IB16IFK, 1756-IB16ISOE, 1756-IB16ISOEK, 1756-IB32, 1756-IB32K, 1756-IB32XT, 1756-IV32, 1756-IV32K, 1756-LSC8XB8I, 1756-LSC8XB8IK, 1756-OB8E, 1756-OB8EK, 1756-OB16D, 1756-OB16DK, 1756-OB16I, 1756-OB16IK, 1756-OB16IEF, 1756-OB16IEFK, 1756-OB16IEFS, 1756-OB16IEFSK, 1756-OB16IS, 1756-OB32, 1756-OB32K, 1756-OB32XT, 1756-OH8I, 1756-OV32E, 1756-OV32EK	1756-TBCH, 1756-TBCHXT	<ul style="list-style-type: none"> • Cage-clamp removable terminal block with standard housing • 36-pin 	0.5 N•m (4.4 lb•in) Single wire connection: 0.33...2.1 mm ² (22...14 AWG) solid or stranded copper wire rated at 105 °C (221 °F), or greater, 1.2 mm (3/64 in.) insulation max. Do not wire more than one conductor on any single terminal. Double wire connection: 0.33...1.3 mm ² (22...16 AWG) solid or stranded copper wire rated at 105 °C (221 °F), or greater, 1.2 mm (3/64 in.) insulation max. Do not wire more than two conductors on any single terminal.
	1756-TBS6H, 1756-TBS6HXT	<ul style="list-style-type: none"> • Spring-clamp removable terminal block with standard housing • 36-pin 	Single wire connection: 0.33...2.1 mm ² (22...14 AWG) solid or stranded copper wire rated at 105 °C (221 °F), or greater, 1.2 mm (3/64 in.) insulation max. Do not wire multiple conductors on any terminal.
—	1756-TBE, 1756-TBEXT	Extended-depth terminal block housing	—


Install the RTB

Follow these steps to install the RTB onto the module to connect the wiring.




WARNING: When you connect or disconnect the RTB with field-side power applied, an electric arc can occur. This could cause an explosion in hazardous location installations. Be sure that power is removed or the area is nonhazardous before you proceed.

1. Before installing the RTB, verify the following:
 - Field-side wiring of the RTB is complete.
 - The RTB housing is snapped into place on the RTB.
 - The RTB housing door is closed.
 - The locking tab at the top of the module is unlocked.
2. Align the top, bottom, and left guides of the RTB with those on the module.

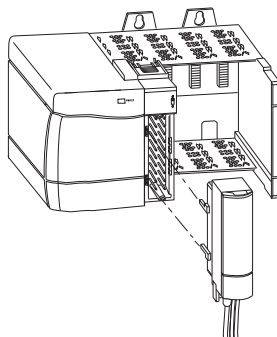

3. Press quickly and evenly to seat the RTB on the module until the latches snap into place.
4. Slide the locking tab down to lock the RTB onto the module.

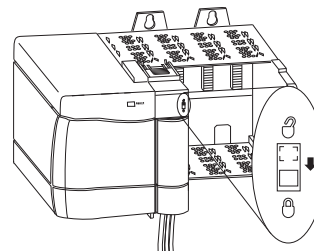

Specifications

Attribute	1756-IB16, 1756-IB16K	1756-IB16D, 1756-IB16DK	1756-IB16I, 1756-IB16IK	1756-IB16IF, 1756-IB16IFK	1756-IB16ISOE, 1756-IB16ISOEK	1756-IB32, 1756-IB32K
Voltage and current ratings						
Backplane	5.1V DC, 100 mA, 24V DC, 2 mA	5.1V DC, 150 mA, 24V DC, 3 mA	5.1V DC, 135 mA, 24V DC, 3 mA	5.1V DC, 275 mA, 24V DC, 3 mA	5.1V DC, 320 mA, 24V DC, 2 mA	5.1V DC, 120 mA, 24V DC, 2 mA
Inputs	10...31.2V DC, 10 mA max	10...30V DC, 13 mA max	10...30V DC, 10 mA max	10...30V DC, 5 mA max	10...55V DC, 5.1 mA max	10...31.2V DC, 5.5 mA max
Isolation voltage	250V (continuous), reinforced insulation type, inputs-to-backplane 250V (continuous), basic insulation type, input group-to-group No isolation between individual inputs	250V (continuous), basic insulation type, inputs-to-backplane, and input group-to-group No isolation between individual inputs	250V (continuous), basic insulation type, inputs-to-backplane, and input-to-input	250V (continuous), reinforced insulation type, inputs-to-backplane 250V (continuous), basic insulation type, input-to-input	250V (continuous), basic ⁽¹⁾ insulation type, inputs-to-backplane 125V (continuous), basic insulation type, input-to-input	250V (continuous), reinforced insulation type, inputs-to-backplane 250V (continuous), basic insulation type, input group-to-group No isolation between individual inputs
Temperature, operating • IEC 60068-2-1 (Test Ad, Operating Cold) • IEC 60068-2-2 (Test Bd, Operating Dry Heat) • IEC 60068-2-14 (Test Nb, Operating Thermal Shock)	0 °C ≤ Ta ≤ 60 °C (32 °F ≤ Ta ≤ 140 °F)					
Temperature, surrounding air, max	60 °C (140 °F)					
Corrosive Atmosphere ⁽²⁾ • ASTM B845-97 Method H Accelerated Test (20-Day Exposure)	Severity Level G3 ⁽³⁾ per ANSI/ISA 71.04-2013, Airborne Contaminants—Gases Severity Level CX ⁽³⁾⁽⁴⁾ per IEC 60721-3-3:2019, Chemically Active Substances					
Enclosure type rating	None (open-style)					
North American temp code	T3C		T4	T4A	T4	
ATEX temp code	T3		T4			
IECEx temp code	T3		T4			

- (1) Per IEC 61010-1 terminology, the insulation type is basic. Per older UL508 terminology, the insulation type is reinforced.
- (2) Only applicable to modules that end with a 'K'.
- (3) The module and the corresponding RTB must remain installed at all times and the RTB door must remain closed, for the product to maintain its corrosive atmosphere rating.
- (4) Up to 9.6 microns per year, corrosion rate of copper.

Attribute	1756-IC16	1756-IG16, 1756-IG16K	1756-IH16I, 1756-IH16IK	1756-IH16ISOE, 1756-IH16ISOEK
Voltage and current ratings				
Backplane	5.1V DC, 135 mA, 24V DC, 3 mA		5.1V DC, 140 mA, 24V DC, 2 mA	
Inputs	30...55V DC, 7 mA (60 °C, 140 °F), and 30...60V DC, 7 mA (55 °C, 131 °F)	0-5.5V DC, 4.1 mA (source) Supply: 4.5-5.5V DC, 160 mA	90...146V DC 90...146V DC @ 50 °C (122 °F), 12 Channels ON 90...132V DC @ 55 °C (131 °F), 14 Channels ON 90...125V DC @ 60 °C (140 °F), 16 Channels ON 90...146V DC @ 30 °C (86 °F), 16 Channels ON 1 mA @ 90V DC, 3 mA @ 146V DC	90...140V DC 1.15 mA @ 90V DC, 1.85 mA @ 140V DC
Isolation voltage	250V (continuous), basic insulation type, inputs-to-backplane 125V (continuous) basic insulation type, input group-to-group No isolation between individual inputs	250V (continuous), basic insulation type, inputs-to-backplane, and input group-to-group No Isolation between individual inputs	250V (continuous), basic insulation type, inputs-to-backplane, and input-to-input	250V (continuous), basic insulation type, inputs-to-backplane, and input-to-input
Temperature, operating • IEC 60068-2-1 (Test Ad, Operating Cold) • IEC 60068-2-2 (Test Bd, Operating Dry Heat) • IEC 60068-2-14 (Test Nb, Operating Thermal Shock)	0 °C ≤ Ta ≤ 60 °C (32 °F ≤ Ta ≤ 140 °F)			
Temperature, surrounding air, max	60 °C (140 °F)			
Corrosive Atmosphere ⁽¹⁾ • ASTM B845-97 Method H Accelerated Test (20-Day Exposure)	—	Severity Level G3 ⁽²⁾ per ANSI/ISA 71.04-2013, Airborne Contaminants—Gases Severity Level CX ⁽²⁾⁽³⁾ per IEC 60721-3-3:2019, Chemically Active Substances		
Enclosure type rating	None (open-style)			
North American temp code	T4			T3C
ATEX temp code	T4		—	
IECEx temp code	T4		—	

- (1) Only applicable to modules that end with a 'K'.
- (2) The module and the corresponding RTB must remain installed at all times and the RTB door must remain closed, for the product to maintain its corrosive atmosphere rating.
- (3) Up to 9.6 microns per year, corrosion rate of copper.

Attribute	1756-IV16, 1756-IV16K	1756-IV32, 1756-IV32K	1756-LSC8XB8I, 1756-LSC8XB8IK
Voltage and current ratings			
Backplane	5.1V DC, 110 mA, 24V DC, 2 mA	5.1V DC, 175 mA, 24V DC, 2 mA	5.1V DC, 275 mA, 24V DC, 3 mA
Inputs	10...30V DC, 1.5...10 mA/pin (input)	10...30V DC, 1.5...5 mA/pin (input)	10...30V DC, 5 mA max
Isolation voltage	250V (continuous), basic insulation type, inputs-to-backplane, and input group-to-group No isolation between individual inputs		250V (continuous), reinforced insulation type, inputs-to-backplane 250V (continuous), basic insulation type, input-to-input
Temperature, operating • IEC 60068-2-1 (Test Ad, Operating Cold) • IEC 60068-2-2 (Test Bd, Operating Dry Heat) • IEC 60068-2-14 (Test Nb, Operating Thermal Shock)	0 °C ≤ Ta ≤ 60 °C (32 °F ≤ Ta ≤ 140 °F)		
Temperature, surrounding air, max	60 °C (140 °F)		
Corrosive Atmosphere ⁽¹⁾ • ASTM B845-97 Method H Accelerated Test (20-Day Exposure)	Severity Level G3 ⁽²⁾ per ANSI/ISA 71.04-2013, Airborne Contaminants—Gases Severity Level CX ⁽²⁾⁽³⁾ per IEC 60721-3-3:2019, Chemically Active Substances		
Enclosure type rating	None (open-style)		
North American temp code	T4A		
ATEX temp code	T4		
IECEX temp code	T4		

- (1) Only applicable to modules that end with a 'K'.
- (2) The module and the corresponding RTB must remain installed at all times and the RTB door must remain closed, for the product to maintain its corrosive atmosphere rating.
- (3) Up to 9.6 microns per year, corrosion rate of copper.

Attribute	1756-0B8, 1756-0B8K	1756-0B8EI, 1756-0B8EIK	1756-0B16D, 1756-0B16DK	1756-0B16E, 1756-0B16EK	1756-0B16I, 1756-0B16IK	1756-0B16IEF, 1756-0B16IEFK
Voltage and current ratings						
Backplane	5.1V DC, 165 mA, 24V DC, 2 mA	5.1V DC, 250 mA, 24V DC, 2 mA	5.1V DC, 250 mA, 24V DC, 140 mA	5.1V DC, 250 mA, 24V DC, 2 mA	5.1V DC, 350 mA, 24V DC, 2.5 mA	5.1V DC, 320 mA, 24V DC, 3 mA
Output	10...30V DC, 2 A pilot duty (DC-13/SQ)	10...30V DC, 2 A pilot duty (DC-13/SQ)	19.2...30V DC, UL Out: 24V DC 2 A pilot duty (DC-13/SQ) 2 A/1 A 30 °C (86 °F)/ 60 °C (140 °F)	10...31.2V DC, 1 A, 2 A Inrush	24V DC, 2 A pilot duty (DC-13/SQ) ATEX/IECEX: 10...30V DC	10...30V DC, 1 A max, 60 °C (140 °F) 10...30V DC, 2 A, 45 °C (113 °F) per channel (4 channels max)
MDL	8 A 60 °C (140 °F)	10 A/16 A 60 °C (140 °F)/ 55 °C (131 °F)	8 A/4 A 30 °C (86 °F)/ 60 °C (140 °F)	8 A max 60 °C (140 °F)	8 A @ 30 °C (86 °F) 4 A @ 60 °C (140 °F) (linear derating)	—
Isolation voltage	250V (continuous), basic insulation type, outputs-to-backplane. No isolation between individual outputs	250V (continuous), basic insulation type outputs-to-backplane, and output-to-output	250V (continuous), basic ⁽¹⁾ insulation type, outputs-to-backplane. 125V (continuous), basic insulation type, output group-to-group. No isolation between individual outputs	250V (continuous), basic insulation type, outputs-to-backplane 125V (continuous), basic insulation type, output-to-output	250V (continuous), basic insulation type, outputs-to-backplane 125V (continuous), basic insulation type, output-to-output	250V (continuous), reinforced insulation type, outputs-to-backplane 250V (continuous), basic insulation type, output-to-output
Temperature, operating • IEC 60068-2-1 (Test Ad, Operating Cold) • IEC 60068-2-2 (Test Bd, Operating Dry Heat) • IEC 60068-2-14 (Test Nb, Operating Thermal Shock)	0 °C ≤ Ta ≤ 60 °C (32 °F ≤ Ta ≤ 140 °F)					
Temperature, surrounding air, max	60 °C (140 °F)					
Corrosive Atmosphere ⁽²⁾ • ASTM B845-97 Method H Accelerated Test (20-Day Exposure)	Severity Level G3 ⁽³⁾ per ANSI/ISA 71.04-2013, Airborne Contaminants—Gases Severity Level CX ⁽³⁾⁽⁴⁾ per IEC 60721-3-3:2019, Chemically Active Substances					
Enclosure type rating	None (open-style)					
North American temp code	T4A			T4	T4A	T4
ATEX temp code	T4					
IECEX temp code	T4					

- (1) Per IEC 61010-1 terminology, the insulation type is basic. Per older UL508 terminology, the insulation type is reinforced.
- (2) Only applicable to modules that end with a 'K'.
- (3) The module and the corresponding RTB must remain installed at all times and the RTB door must remain closed, for the product to maintain its corrosive atmosphere rating.
- (4) Up to 9.6 microns per year, corrosion rate of copper.

Attribute	1756-0B16IS	1756-0B16IEFS, 1756-0B16IEFSK	1756-0B32, 1756-0B32K	1756-0C8, 1756-0C8K	1756-0G16, 1756-0G16K
Voltage and current ratings					
Backplane	5.1V DC, 350 mA, 24V DC, 2.5 mA	5.1V DC, 320 mA, 24V DC, 3 mA	5.1V DC, 300 mA, 24V DC, 2 mA	5.1V DC, 165 mA, 24V DC, 2 mA	5.1V DC, 210 mA, 24V DC, 2 mA
Output	24V DC, 2 A pilot duty (DC-13/SO) ATEX/IECEX: 10...30V DC	10...30V DC, 1 A max, 60 °C (140 °F), 10...30V DC, 2 A, 45 °C (113 °F) per channel (four channels max)	10...31.2V DC, 500 mA current per channel, 50 °C (122 °F) 350 mA, 60 °C (140 °F) 1 A inrush per channel, 16 A maximum current per module 50 °C (122 °F) 10 A, 60 °C (140 °F)	30 ...60V DC, 2 A pilot duty (DC-13/SO) MDL: 8 A 60 °C (140 °F)	4.5-5.5V DC, 24 mA User Supply: 5.5V DC, 384 mA, 60 °C (140 °F) UL Output: 5V DC, 24 mA UL User Supply: 5V DC, 384 mA, 60 °C (140 °F)
Isolation voltage	250V (continuous), basic insulation type, outputs-to-backplane, and output-to-output	250V (continuous), reinforced insulation type, outputs- to-backplane 250V (continuous), basic insulation type, output-to-output	250V (continuous), basic ⁽¹⁾ insulation type, outputs-to-backplane. 125V (continuous), basic insulation type output group-to-group. No isolation between individual outputs	250V (continuous), basic insulation type, outputs-to-backplane No isolation between individual outputs	250V (continuous), basic insulation type, outputs-to-backplane, and output group-to-group No isolation between individual outputs
Temperature, operating • IEC 60068-2-1 (Test Ad, Operating Cold) • IEC 60068-2-2 (Test Bd, Operating Dry Heat) • IEC 60068-2-14 (Test Nb, Operating Thermal Shock)	0 °C ≤ Ta ≤ 60 °C (32 °F ≤ Ta ≤ 140 °F)				
Temperature, surrounding air, max	60 °C (140 °F)				
Corrosive Atmosphere ⁽²⁾ • ASTM B845-97 Method H Accelerated Test (20-Day Exposure)	-	Severity Level G3 ⁽³⁾ per ANSI/ISA 71.04-2013, Airborne Contaminants—Gases Severity Level CX ⁽³⁾⁽⁴⁾ per IEC 60721-3-3:2019, Chemically Active Substances			
Enclosure type rating	None (open-style)				
North American temp code	T4A				T4A
ATEX temp code	T4				
IECEX temp code	T4				

- (1) Per IEC 61010-1 terminology, the insulation type is basic. Per older UL508 terminology, the insulation type is reinforced.
- (2) Only applicable to modules that end with a 'K'.
- (3) The module and the corresponding RTB must remain installed at all times and the RTB door must remain closed, for the product to maintain its corrosive atmosphere rating.
- (4) Up to 9.6 microns per year, corrosion rate of copper.

Attribute	1756-0H8I	1756-0V16E	1756-0V32E, 1756-0V32EK
Voltage and current ratings			
Backplane	5.1V DC, 210 mA, 24V DC, 2 mA	5.1V DC, 210 mA, 24V DC, 2 mA	5.1V DC, 390 mA, 24V DC, 2 mA
Output	90...146V DC MDL: 8 A @ 60 °C (140 °F)	10...30V DC, SINK OUTPUT 1 A pilot duty (DC-13/SR) MDL OUT: 8 A max	10...30V DC, 350 mA, 60 °C (140 °F), 500 mA, 50 °C (122 °F) pilot duty (DC-13/SS) Group: 5 A/8 A 60 °C (140 °F)/50 °C (122 °F)
Isolation voltage	250V (continuous), basic insulation type, outputs-to-backplane, and output-to-output	250V (continuous), basic insulation type, outputs-to-backplane, and output group-to-group No isolation between individual outputs	
Temperature, operating • IEC 60068-2-1 (Test Ad, Operating Cold) • IEC 60068-2-2 (Test Bd, Operating Dry Heat) • IEC 60068-2-14 (Test Nb, Operating Thermal Shock)	0 °C ≤ Ta ≤ 60 °C (32 °F ≤ Ta ≤ 140 °F)		
Temperature, surrounding air, max	60 °C (140 °F)		
Corrosive Atmosphere ⁽¹⁾ • ASTM B845-97 Method H Accelerated Test (20-Day Exposure)	-	Severity Level G3 ⁽²⁾ per ANSI/ISA 71.04-2013, Airborne Contaminants—Gases Severity Level CX ⁽²⁾⁽³⁾ per IEC 60721-3-3:2019, Chemically Active Substances	
Enclosure type rating	None (open-style)		
North American temp code	T4A	T4	
ATEX temp code	-		
IECEX temp code	-		

- (1) Only applicable to modules that end with a 'K'.
- (2) The module and the corresponding RTB must remain installed at all times and the RTB door must remain closed, for the product to maintain its corrosive atmosphere rating.
- (3) Up to 9.6 microns per year, corrosion rate of copper.

Attribute	1756-IB16XT	1756-IB32XT
Voltage and current ratings		
Backplane	5.1V DC, 100 mA, 24V DC, 2 mA	5.1V DC, 120 mA, 24V DC, 2 mA
Inputs	10...31.2V DC, 10 mA max	10...31.2V DC, 5.5 mA max
MDL	—	
Isolation voltage	250V (continuous), reinforced insulation type, inputs-to-backplane 250V (continuous), basic insulation type, input group-to group No isolation between individual inputs	
Temperature, operating • IEC 60068-2-1 (Test Ad, Operating Cold) • IEC 60068-2-2 (Test Bd, Operating Dry Heat) • IEC 60068-2-14 (Test Nb, Operating Thermal Shock)	0 °C ≤ Ta ≤ 60 °C (32 °F ≤ Ta ≤ 140 °F)	
Temperature, surrounding air, max	60 °C (140 °F)	
Corrosive Atmosphere • ASTM B845-97 Method K Accelerated Test (30-Day Exposure) plus additional Rockwell Automation proprietary accelerated corrosive environment test protocol for specific industries with sources of gaseous sulfur compounds.	Severity Level GX ⁽¹⁾⁽²⁾ per ANSI/ISA 71.04-2013, Airborne Contaminants—Gases Severity Level CX ⁽¹⁾ per IEC 60721-3-3:2019, Chemically Active Substances	
Conformal Coated	Yes	
Enclosure type rating	None (open-style)	
North American temp code	T3C	T4
ATEX and IECEx temp code	T3	T4

- (1) The module and the corresponding RTB must remain installed at all times and the RTB door must remain closed, once the factory packaging seal is broken, for the product to maintain its corrosive atmosphere rating.
 (2) Up to 2100 angstroms of film growth per 30 days of copper and/or silver reactivity.

Attribute	1756-OB32XT
Voltage and current ratings	
Backplane	5.1V DC, 300 mA, 24V DC, 2 mA
Output	10...31.2V DC, 500 mA current per channel, 50 °C (122 °F) 350 mA, 60 °C (140 °F) 1 A inrush per channel, 16 A maximum current per module 50 °C (122 °F) 10 A, 60 °C (140 °F)
MDL	—
Isolation voltage	250V (continuous), basic ⁽¹⁾ insulation type, outputs-to-backplane. 125V (continuous), basic insulation type, output group-to-group. No isolation between individual outputs
Temperature, operating • IEC 60068-2-1 (Test Ad, Operating Cold) • IEC 60068-2-2 (Test Bd, Operating Dry Heat) • IEC 60068-2-14 (Test Nb, Operating Thermal Shock)	0 °C ≤ Ta ≤ 60 °C (32 °F ≤ Ta ≤ 140 °F)
Temperature, surrounding air, max	60 °C (140 °F)
Corrosive Atmosphere • ASTM B845-97 Method K Accelerated Test (30-Day Exposure) plus additional Rockwell Automation proprietary accelerated corrosive environment test protocol for specific industries with sources of gaseous sulfur compounds.	Severity Level GX ⁽²⁾⁽³⁾ per ANSI/ISA 71.04-2013, Airborne Contaminants—Gases Severity Level CX ⁽²⁾ per IEC 60721-3-3:2019, Chemically Active Substances
Conformal Coated	Yes
Enclosure type rating	None (open-style)
North American temp code	T4
ATEX and IECEx temp code	T4

- (1) Per IEC 61010-1 terminology, the insulation type is basic. Per older UL508 terminology, the insulation type is reinforced.
 (2) The module and the corresponding RTB must remain installed at all times and the RTB door must remain closed, once the factory packaging seal is broken, for the product to maintain its corrosive atmosphere rating.
 (3) Up to 2100 angstroms of film growth per 30 days of copper and/or silver reactivity.

IMPORTANT ControlLogix-XT system components are rated for extreme environmental conditions **only** when used properly with other system components that share the same extreme-environment ratings. The extreme-environment ratings of ControlLogix-XT components are nullified when used with other system components that do not share comparable attributes.
EXAMPLE: If the temperature rating found in the Technical Data publication for your ControlLogix-XT module is 60 °C and you pair it with a ControlLogix-ZXT chassis rated for 70 °C, the system is rated 60 °C.
 To ensure that your system is equipped for extreme environmental conditions, compare the corrosive atmosphere and temperature ratings found in the Technical Data publication for each system component.

IMPORTANT When a ControlLogix-XT module is used as a replacement for a standard ControlLogix module, all functional and environmental requirements of the standard ControlLogix module apply, with the exception of the power output ratings.

Additional Resources

These resources contain information about related products from Rockwell Automation.

Resource	Description
ControlLogix I/O Modules Specifications Technical Data, publication 1756-1D002	Provides specifications, wiring diagrams, and schematics for ControlLogix I/O modules.
ControlLogix Chassis Installation Instructions, publication 1756-IN621	Provides installation instructions for the ControlLogix chassis.
ControlLogix Power Supply Installation Instructions, publication 1756-IN619	Provides installation instructions for the ControlLogix power supplies.
ControlLogix Redundant Power Supply Installation Instructions, publication 1756-IN620	Provides installation instructions for the ControlLogix redundant power supplies.
ControlLogix Digital I/O Modules User Manual, publication 1756-UM058	Provides installation, configuration, operation, and maintenance information for ControlLogix digital I/O modules.
Industrial Automation Wiring and Grounding Guidelines, publication 1770-4.1	Provides general guidelines for installing a Rockwell Automation industrial system.
Product Certifications website, rok.auto/certifications	Provides declarations of conformity, certificates, and other certification details.

Rockwell Automation Support

Use these resources to access support information.

Technical Support Center	Find help with how-to videos, FAQs, chat, user forums, Knowledgebase, and product notification updates.	rok.auto/support
Local Technical Support Phone Numbers	Locate the telephone number for your country.	rok.auto/phonesupport
Technical Documentation Center	Quickly access and download technical specifications, installation instructions, and user manuals.	rok.auto/techdocs
Literature Library	Find installation instructions, manuals, brochures, and technical data publications.	rok.auto/literature
Product Compatibility and Download Center (PCDC)	Download firmware, associated files (such as AOP, EDS, and DTM), and access product release notes.	rok.auto/pcdc

Documentation Feedback

Your comments help us serve your documentation needs better. If you have any suggestions on how to improve our content, complete the form at rok.auto/docfeedback.





Waste Electrical and Electronic Equipment (WEEE)



At the end of life, this equipment should be collected separately from any unsorted municipal waste.

Rockwell Automation maintains current product environmental compliance information on its website at rok.auto/pec.

Rockwell Otomasyon Ticaret A.Ş. Kar Plaza İş Merkezi E Blok Kat:6 34752 İçerenköy, İstanbul, Tel: +90 (216) 5698400 EEE Yönetmeliğine Uygundur

Connect with us.    

rockwellautomation.com

expanding human possibility®

AMERICAS: Rockwell Automation, 1201 South Second Street, Milwaukee, WI 53204-2496 USA, Tel: (1) 414.382.2000

EUROPE/MIDDLE EAST/AFRICA: Rockwell Automation NV, Pegasus Park, De Kleetlaan 12a, 1831 Diegem, Belgium, Tel: (32) 2663 0600

ASIA PACIFIC: Rockwell Automation SEA Pte Ltd, 2 Corporation Road, #04-05, Main Lobby, Corporation Place, Singapore 618494, Tel: (65) 6510 6608

UNITED KINGDOM: Rockwell Automation Ltd., Pitfield, Kiln Farm, Milton Keynes, MK11 3DR, United Kingdom, Tel: (44)(1908) 838-800

Allen-Bradley, ControlLogix, ControlLogix-Xt, expanding human possibility, and Rockwell Automation are trademarks of Rockwell Automation, Inc. Trademarks not belonging to Rockwell Automation are property of their respective companies.



PN-709491