

## Ordering Information



For the detailed listing of country and product-specific approvals, refer to the [Approvals Quick Reference Guide \(108M1756\)](#).

For additional technical documentation, please log in to [bntechsupport.com](http://bntechsupport.com) and access the Bently Nevada Media Library.

04425545	Grounding Wrist Strap (single use)
162291	16-Channel Relay Module User Guide
00580453	Connector Header Internal Termination 16-position Green
166M2381	Connector Header Push-in-Spring Type (Alternative for PN 00580453)

## 3500/33 AA-BB

### A: Output Module

01	16-Channel Relay Output Module
02	16-Channel Failsafe Relay Output Module
03	Low Current 16-Channel Relay Output Module
04	Low Current 16-Channel Failsafe Relay Output Module

### B: Hazardous Area Approval Option

00	None
01	cNRTLus (Class 1, Division 2)
02	ATEX / IECEx / CSA (Class 1, Zone 2)

## Spares

149986-01	Spare 16-Channel Relay Control Module
149992-01	Spare 16-Channel Relay Output Module
149992-02	Spare 16-Channel Failsafe Relay Output Module
149992-03	Spare 16-Channel Low Current Relay Output Module
149992-04	Spare 16-Channel Low Current Failsafe Relay Output Module

