


Ordering Information

 For the detailed listing of country and product specific approvals, refer to the *Approvals Quick Reference Guide* (108M1756) available from Bently.com.

Case Expansion Transducer Assembly (dc)

24765-AA-BB

A: Linear Range Option

01	25.4 mm (1.0 in)
02	0.8 mm (2.0 in)
03	101.6 mm (4.0 in)

B: Spring Option

00	Without spring return
01	With spring return

High Temperature Case Expansion Transducer Assembly (dc)


135613 -AA-BB

A: Linear Range Option

01	25.4 mm (1.0 in) with a 127 mm (5.00) rod
02	50.8 mm (2.0 in) with a 152.4 mm (6.00) rod
03	101.6 mm (4.0 in) with a 228.6 mm (9.00) rod
11	25.4 mm (1.0 in) with a 304.8 mm (12.0 in) rod
12	50.8 mm (2.0 in) with a 304.8 mm (12.00) rod
13	101.6 mm (4.0 in) with a 228.6 mm (9.00) rod


B: Spring Option

00	Without spring return
01	With spring return

 Spring Option 01 only available with Linear Range Options 01, 02, & 03

Accessories

135941-01	127 mm (5.0 in) rod
135941-02	152.4 mm (6.0 in) rod
135941-03	228.6 mm (9.0 in) rod
135941-04	304.8 mm (12.0 in) rod
285741	Ferrite Bead

 Ferrite bead required on transducer end of field wiring for CE installations.

For more information on this product, please refer to the DC-LVDT and Housing Assembly User Guide (document TW8029327).