

Ordering Information



For the detailed listing of country and product specific approvals, refer to the *Approvals Quick Reference Guide* (108M1756) available from Bently.com.

330505-AA-BB-CC

A: Transducer Mounting Angle

0 1	0° ± 10°
0 2	90° ± 5°
0 3	180° ± 10°

B: Internal Mounting Thread

0 2	3/8-24 UNF-2B
------------	---------------

C: Mounting Adapter Option

0 0	No Adapter
0 1	1/2 - 20 UNF
0 2	M8 x 1
0 3	1/4 - 28 UNF
0 4	1/4 - 20 UNC
0 5	1/4 - 18 NPT
0 6	5/8 - 18 UNF
0 7	3/8 - 16 UNC

Accessories

For more information, please refer to the 330505 Low Frequency Velocity Sensor User Guide (document 169873).

Part number	Description
89409-01	Individual 1/2 - 20 UNF mounting adapter.
89410-01	Individual M8 x 1 mounting adapter

89411-01	Individual 1/4 - 28 UNF mounting adapter
89412-01	Individual 1/4 - 20 UNC mounting adapter
89413-01	Individual 1/4 - 18 NPT mounting adapter
04300015	Individual 5/8 - 18 UNF mounting adapter.
161191	Individual 1/2 - 13 UNC mounting adapter

Interconnection Cables

The following standard cable lengths are available. You can order custom cable lengths in increments of one foot at additional cost. Some cables have a minimum and maximum length. For details, see each part description below.

Standard Cable Lengths

Feet	Meters (approximate)
6 ft	1.8 m
8 ft	2.4 m
10 ft	3.0 m
12 ft	3.6 m
15 ft	4.5 m
17 ft	5.0 m
20 ft	6.0 m
25 ft	7.6 m
30 ft	9.0 m
33 ft	10.0 m
50 ft	15.2 m
99 ft	30.0 m