


MANUFACTURER-SOURCE TECHNICAL REFERENCE

ABB 3BHE004385R0001 UNS0884A,V1

3BHE004385R0001 UNS0884A,V1 Evidence-Bounded Product Information Manual

ABB requested legacy ABB assembly identity

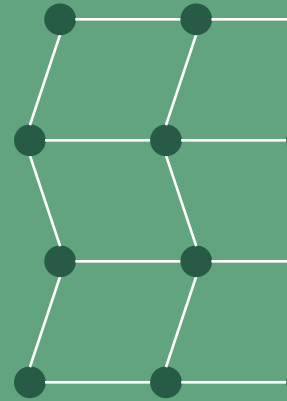

DOCUMENT SCOPE

Independent Apter Power manual compiled only from the cited ABB manufacturer sources. No product photograph is included.

Product / lookup identity	ABB 3BHE004385R0001 UNS0884A,V1
Reference number	3BHE004385R0001
Document basis	Published ABB product records, PDFs, and manuals listed on page 3



Product page

<https://www.apterpower.com/ABB/uns0884a-v1>
Apter Power contact

sales13@apterpower.com | +86 180 3023 5313

Workflow and system context

ABB 3BHE004385R0001 UNS0884A,VI is an evidence-bounded requested legacy ABB assembly identity in the ABB installed-base context. System role: The exact board or module function, signals, host system and revision compatibility remain HOLD pending a physical nameplate and ABB order/BOM evidence.

- | | |
|----|---|
| 01 | System Inputs: The exact board or module function, signals, host system and revision compatibility remain HOLD pending a physical nameplate and ABB order/BOM evidence. |
| 02 | Processing: Preserve the existing UNITROL-nested canonical while removing unsupported technical and trade claims from the page. |

Published context and boundaries

- | | |
|----|---|
| 01 | Verify the complete ABB 3BHE004385R0001 UNS0884A,VI nameplate, revision and installed-system documentation before use. |
| 02 | Do not publish third-party control-module descriptions, voltage, accuracy, connector, ingress-protection, dimensions, weight, origin, tariff or lifecycle claims. |
| 03 | Current formal lifecycle phase, origin, HS code, dimensions and logistics weight remain HOLD without exact ABB evidence. |

Verification and release checks

01	Verify the complete ABB 3BHE004385R0001 UNS0884A,VI nameplate, revision and installed-system documentation before use.
02	Do not publish third-party control-module descriptions, voltage, accuracy, connector, ingress-protection, dimensions, weight, origin, tariff or lifecycle claims.
03	De-energize and follow the site's approved electrical and process-safety procedure before disturbing hardware or field wiring.
04	Back up controller, network, I/O, addressing and configuration data before replacement or firmware work.
05	Verify every companion module, termination unit, cable, connector and power source from approved drawings.
06	Do not copy electrical, communication, mechanical or lifecycle values from a related model or successor.

Identity and release controls

Verification Status	Identity Verification Only
---------------------	----------------------------

Official ABB sources

ABB Library official verification endpoint	https://library.abb.com/
--	---