

MANUFACTURER-SOURCE TECHNICAL REFERENCE

ABB DRA02 37411-4-0369673

DRA02 37411-4-0369673 Verification Product Information Manual

ABB requested ABB legacy module and part-label verification reference product reference

DOCUMENT SCOPE

Independent Apter Power manual limited to verified identity evidence and any directly relevant ABB sources listed in this document. No product photograph is included.

Product / lookup identity	ABB DRA02 37411-4-0369673
Reference number	DRA02 37411-4-0369673
Document basis	Published ABB product records, PDFs, and manuals listed on page 3



Product page

<https://www.apterpower.com/ABB/dra02-37411-4-0369673-identity-verification>
Apter Power contact

sales13@apterpower.com | +86 180 3023 5313

Workflow and system context

ABB DRA02 is an evidence-bounded requested ABB legacy module and part-label verification reference.
Compatibility boundary: Do not infer relay, analog, digital or rack functions from the DRA prefix or from reseller descriptions.

- | | |
|----|--|
| 01 | System Inputs: requested ABB legacy module and part-label verification reference |
| 02 | Processing: Do not infer relay, analog, digital or rack functions from the DRA prefix or from reseller descriptions. |

Published context and boundaries

- | | |
|----|---|
| 01 | DRA02 and requested label 37411-4-0369673 are retained exactly for physical verification; no directly relevant ABB-hosted model document was found. |
| 02 | Do not infer relay, analog, digital or rack functions from the DRA prefix or from reseller descriptions. |
| 03 | Country of origin, HS code, dimensions and logistics weight remain unpublished without exact ABB model-level evidence. |

Verification and release checks

01	Verify the complete ABB DRA02 label and requested part number before use.
02	Do not infer relay, analog, digital or rack functions from the DRA prefix or from reseller descriptions.
03	Confirm the exact host controller, rack position, terminal unit, cable, connector, firmware and project revision.
04	De-energize the equipment and follow the site's approved electrical and process-safety procedure before disturbing hardware or wiring.
05	Back up controller, communication and I/O configuration before replacement or migration work.
06	Do not transfer channels, ranges, voltage, current, communication, mechanical or lifecycle values from a sibling, predecessor or successor.

Identity and release controls

Verification Status	Requested Label Only
---------------------	----------------------

Official ABB sources

Source-link status	No directly relevant official manufacturer source link was found for this exact requested identity. Unrelated and third-party links are intentionally omitted.
--------------------	--