


MANUFACTURER-SOURCE TECHNICAL REFERENCE

ABB DSDX454 5716075-AT

DSDX454 5716075-AT Product Information Manual

ABB Advant Master legacy I/O board identity reference product reference

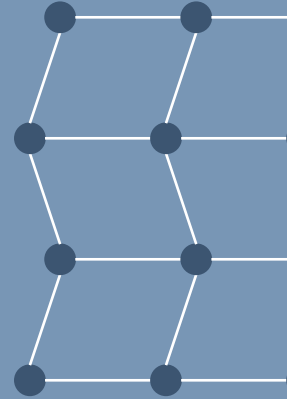

DOCUMENT SCOPE

Independent Apter Power manual limited to verified identity evidence and any directly relevant ABB sources listed in this document. No product photograph is included.

Product / lookup identity	ABB DSDX454 5716075-AT
Reference number	DSDX454 5716075-AT
Document basis	Published ABB product records, PDFs, and manuals listed on page 3



Product page

<https://www.apterpower.com/ABB/dsdx454-5716075-at>
Apter Power contact

sales13@apterpower.com | +86 180 3023 5313

Workflow and system context

ABB DSDX454 is an evidence-bounded Advant Master legacy I/O board identity reference. Compatibility boundary: The U-prefix describes the cited refurbished spare entry; detailed I/O function, terminal unit and electrical ratings remain gated to the exact manual and board revision.

01	System Inputs: Advant Master legacy I/O board identity reference
02	Processing: The U-prefix describes the cited refurbished spare entry; detailed I/O function, terminal unit and electrical ratings remain gated to the exact manual and board revision.

Published context and boundaries

01	ABB's official spare lists identify U5716075-AT as refurbished DSDX454 hardware in the Advant Master installed base.
02	The U-prefix describes the cited refurbished spare entry; detailed I/O function, terminal unit and electrical ratings remain gated to the exact manual and board revision.
03	Country of origin, HS code, dimensions and logistics weight remain unpublished without exact ABB model-level evidence.

Verification and release checks

01	Verify the complete ABB DSDX454 label and requested part number before use.
02	The U-prefix describes the cited refurbished spare entry; detailed I/O function, terminal unit and electrical ratings remain gated to the exact manual and board revision.
03	Confirm the exact host controller, rack position, terminal unit, cable, connector, firmware and project revision.
04	De-energize the equipment and follow the site's approved electrical and process-safety procedure before disturbing hardware or wiring.
05	Back up controller, communication and I/O configuration before replacement or migration work.
06	Do not transfer channels, ranges, voltage, current, communication, mechanical or lifecycle values from a sibling, predecessor or successor.

Identity and release controls

Verification Status	Verified Model And Part
---------------------	-------------------------

Official ABB sources

ABB SPAREtacular Savings list	https://library.e.abb.com/public/715264b5e3c845ce9e215b288414e495/SPAREtacular_Savings_08052022.pdf
ABB Parts Spring Sales Event	https://library.e.abb.com/public/21da0424b0764580920b1d1f51cdaf8c/2020_05_Parts-Spring-Sales-Event.pdf