

MANUFACTURER-SOURCE TECHNICAL REFERENCE

ABB DSMBI27 57360001-HG

DSMBI27 57360001-HG Verification Product Information Manual

ABB requested ABB legacy board and part-label verification reference product reference

DOCUMENT SCOPE

Independent Apter Power manual limited to verified identity evidence and any directly relevant ABB sources listed in this document. No product photograph is included.

Product / lookup identity	ABB DSMBI27 57360001-HG
Reference number	DSMBI27 57360001-HG
Document basis	Published ABB product records, PDFs, and manuals listed on page 3



Product page

<https://www.apterpower.com/ABB/dsmbi27-57360001-hg-verification>
Apter Power contact

sales13@apterpower.com | +86 180 3023 5313

Workflow and system context

ABB DSMB127 is an evidence-bounded requested ABB legacy board and part-label verification reference. Compatibility boundary: Do not infer memory, controller, bus or backup function from the DSMB prefix or from third-party listings.

- | | |
|----|--|
| 01 | System Inputs: requested ABB legacy board and part-label verification reference |
| 02 | Processing: Do not infer memory, controller, bus or backup function from the DSMB prefix or from third-party listings. |

Published context and boundaries

- | | |
|----|--|
| 01 | DSMB127 and 57360001-HG are retained for nameplate verification; no directly relevant ABB-hosted exact-model document was found. |
| 02 | Do not infer memory, controller, bus or backup function from the DSMB prefix or from third-party listings. |
| 03 | Country of origin, HS code, dimensions and logistics weight remain unpublished without exact ABB model-level evidence. |

Verification and release checks

01	Verify the complete ABB DSMBI27 label and requested part number before use.
02	Do not infer memory, controller, bus or backup function from the DSMB prefix or from third-party listings.
03	Confirm the exact host controller, rack position, terminal unit, cable, connector, firmware and project revision.
04	De-energize the equipment and follow the site's approved electrical and process-safety procedure before disturbing hardware or wiring.
05	Back up controller, communication and I/O configuration before replacement or migration work.
06	Do not transfer channels, ranges, voltage, current, communication, mechanical or lifecycle values from a sibling, predecessor or successor.

Identity and release controls

Verification Status	Requested Label Only
---------------------	----------------------

Official ABB sources

Source-link status	No directly relevant official manufacturer source link was found for this exact requested identity. Unrelated and third-party links are intentionally omitted.
--------------------	--