

MANUFACTURER-SOURCE TECHNICAL REFERENCE

# Honeywell FC-IOCHAS-0001S

## Product Reference

non-redundant Safety Manager I/O chassis

### DOCUMENT SCOPE

Independent Apter Power manual limited to verified identity evidence and any directly relevant Honeywell sources listed in this document. No product photograph is included.

|                           |                                                                         |
|---------------------------|-------------------------------------------------------------------------|
| Product / lookup identity | Honeywell FC-IOCHAS-0001S                                               |
| Reference number          | FC-IOCHAS-0001S                                                         |
| Document basis            | Published Honeywell product records, PDFs, and manuals listed on page 3 |



### Product page

<https://www.apterpower.com/Honeywell/fc-iochas-0001s>  
**Apter Power contact**

[sales13@apterpower.com](mailto:sales13@apterpower.com) | +86 180 3023 5313

## Product role and published parameters

**WHAT IT IS, WHAT IT DOES, AND WHERE IT FITS**

Honeywell FC-IOCHAS-0001S is a coated chassis for non-redundant Safety Manager I/O modules. Use FC-IOCHAS-0001S only with the exact host, rack or chassis, terminal hardware, cable and project configuration specified for the installed system. System context: non-redundant Safety Manager I/O chassis.

| Published field     | Manufacturer-published value or verified identity note     |
|---------------------|------------------------------------------------------------|
| System              | Honeywell Safety Manager                                   |
| Function            | Chassis for non-redundant I/O modules                      |
| Coating             | Conformal coated                                           |
| Lifecycle           | Withdrawn                                                  |
| Replacement family  | FC-IOCHAS-0003S with specified power-distribution hardware |
| Verification Status | Verified Product Reference                                 |

## System function and signal path

|    |                                                                                                                                                                   |
|----|-------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 01 | System Inputs: non-redundant Safety Manager I/O chassis                                                                                                           |
| 02 | Processing: Use FC-IOCHAS-0001S only with the exact host, rack or chassis, terminal hardware, cable and project configuration specified for the installed system. |

## Applications, answers, and official sources

**1** Installed-base maintenance: Supports identification and maintenance planning for Honeywell FC-IOCHAS-0001S.

**2** Compatibility review: Compares the exact hardware, host, rack or chassis, terminal assembly, cable and revision before replacement.

**3** Installation planning: Defines the isolation, mounting, wiring and configuration checks required before field work.

**4** Commissioning and troubleshooting: Supports controlled power, communication, channel, diagnostic and alarm checks after work.

## Frequently asked questions

|                                                                           |                                                                                                                                       |
|---------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------|
| How do I confirm compatibility with the installed system?                 | Match the complete model and part number, host system, rack or chassis, terminal assembly, cable, firmware and project documentation. |
| What should be checked before ordering a replacement?                     | Provide clear nameplate photos and verify the installed slot, connector, terminal hardware, field wiring and required revision.       |
| Can a similar Honeywell or related model be used as a direct replacement? | Only when the manufacturer documentation and the installed project explicitly approve that exact substitution.                        |
| What must be checked before installation?                                 | Confirm isolation, power, keying, mounting, connector orientation, cable code, wiring polarity and the latest configuration backup.   |
| Can the product be installed or removed while energized?                  | Follow the exact hardware manual and site procedure; otherwise de-energize the circuit before handling the hardware or field wiring.  |
| How should wiring and termination be verified?                            | Compare every conductor, shield, polarity, terminal number and field supply with the approved drawings before moving any wire.        |

## Official Honeywell sources

|                                      |                                                                                                                                                                                                                                                                                     |
|--------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Honeywell System HINTS November 2020 | <a href="https://process.honeywell.com/content/dam/process/en/documents/document-lists/doc_list_hints/2020/2020-November-System%20HINTS.pdf">https://process.honeywell.com/content/dam/process/en/documents/document-lists/doc_list_hints/2020/2020-November-System%20HINTS.pdf</a> |
|--------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|