

3HNP04014-1

System Integration and Verification Reference

The 3HNP04014-1 is an ABB ABB LCD module with backlight. It provides the documented display assembly within compatible ABB equipment.

Manufacturer	ABB / Elsag Bailey
Complete model	3HNP04014-1
Product description	ABB LCD module with backlight
Prepared by	Apter Power
Document ID	AP-ABB-3HNP04014-1-SI-R1
Revision / issue	R1 / 2026-08-26

APTER POWER SALES TEAM

INDUSTRIAL AUTOMATION PRODUCT SUPPORT

Three interface paths, one controlled configuration.

WHATSAPP / PHONE	+86 180 3023 5313
EMAIL	sales13@apterpower.com
WEBSITE	www.apterpower.com



SCAN FOR PRODUCT &
QUOTE

3HNP04014-1

1. System role

Provides the documented display assembly within compatible ABB equipment.

What the product handles

Signal types and electrical ratings are defined by the cited manufacturer document and the installed-system configuration. Values not stated for this exact complete identifier are intentionally omitted.

Required companion components

Use only the controller, rack, terminal unit, cable, sensor, actuator or power components explicitly documented for the installed ABB system and revision.

Where it is used

Industrial automation, process control, machinery, utilities or robotics installations using the named ABB product family; exact use depends on the approved system design.

Pre-installation record

Parameter	Verified value
Identity	Record complete model 3HNP04014-1 and every revision/suffix from the nameplate
Evidence	Retain the cited manufacturer PDF and site-approved drawings
Configuration	Back up the approved controller, network or module configuration
Connections	Label cables, terminals, module positions and field wiring
Commissioning	Define a point-by-point or communication verification plan

2. Installation and commissioning controls

Recommended verification sequence

Parameter	Verified value
1 - Identify	Match the full nameplate and physical construction
2 - Isolate	Follow site lockout, electrical-safety and ESD procedures
3 - Compare	Confirm companion hardware, cables, termination and revision compatibility
4 - Install	Use manufacturer mounting, grounding and environmental requirements
5 - Configure	Restore only the approved configuration and documented settings
6 - Test	Verify communications, diagnostics and every affected process function
7 - Release	Record results and obtain the required site authorization

Model-specific precautions

- Match the complete model, order code, revision and physical construction before installation or replacement.
- Use only the electrical ratings, wiring and environmental limits stated in the applicable ABB document.
- Record the existing configuration and test every affected signal, communication path and safety function before release.

APTER POWER SALES TEAM

INDUSTRIAL AUTOMATION PRODUCT SUPPORT

Three interface paths, one controlled configuration.

WHATSAPP / PHONE

+86 180 3023 5313

EMAIL

sales13@apterpower.com

WEBSITE

www.apterpower.com



SCAN FOR PRODUCT &
QUOTE

3HNP04014-1