

MANUFACTURER-SOURCE TECHNICAL REFERENCE

Honeywell MC-TDOY22 51204162-175

MC-TDOY22 51204162-175 Product Information Manual

24 VDC digital-output field termination assembly

DOCUMENT SCOPE

Independent Apter Power manual limited to verified identity evidence and any directly relevant Honeywell sources listed in this document. No product photograph is included.

Product / lookup identity	Honeywell MC-TDOY22 51204162-175
Reference number	51204162-175
Document basis	Published Honeywell product records, PDFs, and manuals listed on page 3



Product page

<https://www.apterpower.com/Honeywell/mc-tdoy22>
Apter Power contact

sales13@apterpower.com | +86 180 3023 5313

Workflow and system context

Honeywell MC-TDOY22 51204162-175 is a 24 VDC digital-output field termination assembly for the documented Honeywell control configuration. Use MC-TDOY22 51204162-175 only with the exact host, rack or chassis, terminal hardware, cable and project configuration specified for the installed system.

01	System Inputs: 24 VDC digital-output field termination assembly
02	Processing: Use MC-TDOY22 51204162-175 only with the exact host, rack or chassis, terminal hardware, cable and project configuration specified for the installed system.

Published context and boundaries

01	Use MC-TDOY22 51204162-175 only with the exact host, rack or chassis, terminal hardware, cable and project configuration specified for the installed system.
02	Lifecycle evidence boundary: Use the cited model-level lifecycle statement where supplied.
03	Verify the complete Honeywell MC-TDOY22 51204162-175 physical label before use.

Verification and release checks

01	Verify the complete Honeywell MC-TDOY22 51204162-175 physical label before use.
02	Use MC-TDOY22 51204162-175 only with the exact host, rack or chassis, terminal hardware, cable and project configuration specified for the installed system.
03	Confirm the exact rack or chassis position, terminal assembly, cable, connector, power and project revision.
04	De-energize the equipment unless the exact hardware manual and site procedure explicitly permit energized service.
05	Back up controller, communication and I/O configuration before replacement or migration work.
06	Do not transfer electrical, communication or mechanical values from a related model or different suffix.

Identity and release controls

Verification Status	Verified Product Reference
---------------------	----------------------------