


MANUFACTURER-SOURCE TECHNICAL REFERENCE

ABB DSDI130 57160001-AA

DSDI130 57160001-AA Verification Product Information Manual

ABB requested ABB legacy digital-input identity reference product reference

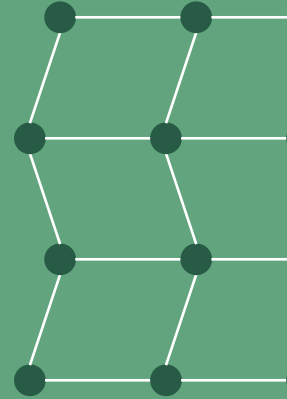

DOCUMENT SCOPE

Independent Apter Power manual limited to verified identity evidence and any directly relevant ABB sources listed in this document. No product photograph is included.

Product / lookup identity	ABB DSDI130 57160001-AA
Reference number	DSDI130 57160001-AA
Document basis	Published ABB product records, PDFs, and manuals listed on page 3



Product page

<https://www.apterpower.com/ABB/dsdi130-57160001-aa-verification>

Apter Power contact

sales13@apterpower.com | +86 180 3023 5313

Workflow and system context

ABB DSDI130 is an evidence-bounded requested ABB legacy digital-input identity reference. Compatibility boundary: Do not copy DSAI130 analog-input data or DSDI110/131 digital-input specifications to this requested identity.

- | | |
|----|---|
| 01 | System Inputs: requested ABB legacy digital-input identity reference |
| 02 | Processing: Do not copy DSAI130 analog-input data or DSDI110/131 digital-input specifications to this requested identity. |

Published context and boundaries

- | | |
|----|--|
| 01 | DSDI130 and 57160001-AA are retained for nameplate verification; no directly relevant ABB-hosted exact-model document was found. |
| 02 | Do not copy DSAI130 analog-input data or DSDI110/131 digital-input specifications to this requested identity. |
| 03 | Country of origin, HS code, dimensions and logistics weight remain unpublished without exact ABB model-level evidence. |

Verification and release checks

01	Verify the complete ABB DSDI130 label and requested part number before use.
02	Do not copy DSAI130 analog-input data or DSDI110/131 digital-input specifications to this requested identity.
03	Confirm the exact host controller, rack position, terminal unit, cable, connector, firmware and project revision.
04	De-energize the equipment and follow the site's approved electrical and process-safety procedure before disturbing hardware or wiring.
05	Back up controller, communication and I/O configuration before replacement or migration work.
06	Do not transfer channels, ranges, voltage, current, communication, mechanical or lifecycle values from a sibling, predecessor or successor.

Identity and release controls

Verification Status	Requested Label Only
---------------------	----------------------

Official ABB sources

Source-link status	No directly relevant official manufacturer source link was found for this exact requested identity. Unrelated and third-party links are intentionally omitted.
--------------------	--