

MANUFACTURER-SOURCE TECHNICAL REFERENCE

Honeywell 620-0036 620-0036

Product Reference

IPC 620-35 processor power supply

DOCUMENT SCOPE

Apter Power product reference prepared from product-specific Honeywell technical information. Confirm the complete product identity and installed-system requirements before use. No product photograph is included.

Product / lookup identity	Honeywell 620-0036 620-0036
Reference number	620-0036
Document basis	Product-specific Honeywell technical information



Product page

<https://www.apterpower.com/Honeywell/620-0036>
Apter Power contact

sales13@apterpower.com | +86 180 3023 5313

Product role and published parameters

WHAT IT IS, WHAT IT DOES, AND WHERE IT FITS

Honeywell 620-0036 is the processor power supply used with an IPC 620-35 controller assembly. Its primary hardware function is IPC 620-35 processor power supply. System context: IPC 620-35 processor power supply.

Technical parameter	Technical value
Assembly type	Processor power supply
Controller family	IPC 620-35
AC selection	115 VAC or 230 VAC
AC terminals	Line/L1, Common/L2 and Ground
Verification Status	Product Reference

System function and signal path

01	System Inputs: IPC 620-35 processor power supply
02	Processing: Honeywell 620-0036 is the processor power supply used with an IPC 620-35 controller assembly.

Applications and answers

1 620-0036 installed-base replacement: Supports like-for-like maintenance of the documented IPC 620-35 processor power supply.

2 620-0036 compatibility review: Checks the host hardware, slot or mounting position, companion assembly, cable and revision before replacement.

3 620-0036 installation planning: Defines the required isolation, ESD, terminal, wiring and configuration checks before field work.

4 620-0036 commissioning: Supports controlled power, channel, communication, diagnostic and process-response checks after installation.

Frequently asked questions

Which assembly is powered by 620-0036?	620-0036 is the ipc 620-35 processor power supply described on this page.
What must be checked before energizing 620-0036?	Confirm the selected AC or DC input, protective earth, connector position, fuse or protection arrangement and the installed load before energizing 620-0036.
How should technicians diagnose a power fault on 620-0036?	Check input power, protection devices, connectors, output rails and associated status indications in a controlled sequence before replacing 620-0036.
What assembly type value applies to 620-0036?	For 620-0036, the listed assembly type value is Processor power supply. Confirm the same marking and configuration on the installed unit before work.
What controller family value applies to 620-0036?	For 620-0036, the listed controller family value is IPC 620-35. Confirm the same marking and configuration on the installed unit before work.
What ac selection value applies to 620-0036?	For 620-0036, the listed ac selection value is 115 VAC or 230 VAC. Confirm the same marking and configuration on the installed unit before work.