

MANUFACTURER-SOURCE TECHNICAL REFERENCE

# Honeywell 51305072-100

## Product Information Manual

CLCN A/B LCN I/O board

### DOCUMENT SCOPE

Apter Power product reference prepared from product-specific Honeywell technical information. Confirm the complete product identity and installed-system requirements before use. No product photograph is included.

|                           |                                                  |
|---------------------------|--------------------------------------------------|
| Product / lookup identity | Honeywell 51305072-100                           |
| Reference number          | 51305072-100                                     |
| Document basis            | Product-specific Honeywell technical information |



### Product page

<https://www.apterpower.com/Honeywell/51305072-100>

### Apter Power contact

[sales13@apterpower.com](mailto:sales13@apterpower.com) | +86 180 3023 5313

## Workflow and system context

Honeywell 51305072-100 is a CLCN A/B I/O board that provides the LCN connection for compatible K2LCN and K4LCN processor assemblies. Its primary hardware function is CLCN A/B LCN I/O board.

|    |                                                                                                                                                  |
|----|--------------------------------------------------------------------------------------------------------------------------------------------------|
| 01 | System Inputs: CLCN A/B LCN I/O board                                                                                                            |
| 02 | Processing: Honeywell 51305072-100 is a CLCN A/B I/O board that provides the LCN connection for compatible K2LCN and K4LCN processor assemblies. |

## Published context and boundaries

|    |                                                                                                                                            |
|----|--------------------------------------------------------------------------------------------------------------------------------------------|
| 01 | Use 51305072-100 with the exact Honeywell host, companion hardware, terminal assembly and field wiring specified for the installed system. |
| 02 | Verify model 51305072-100 and part number 51305072-100 on the physical label before use.                                                   |
| 03 | Match every 51305072-100 connector, terminal, cable and companion assembly before moving field wiring.                                     |

## Verification and release checks

|    |                                                                                                                                            |
|----|--------------------------------------------------------------------------------------------------------------------------------------------|
| 01 | Verify model 51305072-100 and part number 51305072-100 on the physical label before use.                                                   |
| 02 | Use 51305072-100 with the exact Honeywell host, companion hardware, terminal assembly and field wiring specified for the installed system. |
| 03 | Match every 51305072-100 connector, terminal, cable and companion assembly before moving field wiring.                                     |
| 04 | Back up the applicable controller, node, I/O or communication configuration before replacing 51305072-100.                                 |
| 05 | Isolate energy before handling 51305072-100 unless the applicable hardware procedure explicitly permits energized service.                 |
| 06 | Follow ESD controls and protect 51305072-100 connectors and printed-circuit assemblies during handling.                                    |

| Identity and release controls |                   |
|-------------------------------|-------------------|
| Verification Status           | Product Reference |