


MANUFACTURER-SOURCE TECHNICAL REFERENCE

Bently Nevada 200150-06-CN

Installation Guide

general-purpose Trendmaster accelerometer

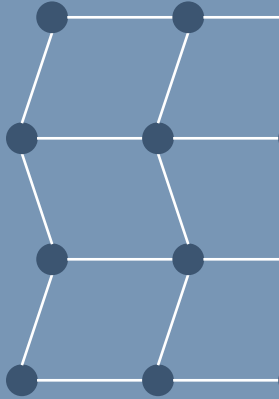

DOCUMENT SCOPE

Apter Power product reference prepared from product-specific Bently Nevada technical information. Confirm the complete product identity and installed-system requirements before use. No product photograph is included.

Product / lookup identity	Bently Nevada 200150-06-CN
Reference number	200150-06-CN
Document basis	Bently Nevada technical documents listed on page 3



Product page

<https://www.apterpower.com/Bently-Nevada/200150-06-cn>

Apter Power contact

sales13@apterpower.com | +86 180 3023 5313

Workflow and system context

Bently Nevada 200150-06-CN is a general-purpose Trendmaster accelerometer supplied with a 3/8-24 to 1/4 NPT 3/4 in hex stud. Use it only in the matched Bently Nevada machinery-monitoring installation and verify the complete product code, associated hardware, mounting and wiring before service.

01	System Inputs: general-purpose Trendmaster accelerometer
02	Processing: Bently Nevada 200150-06-CN is a general-purpose Trendmaster accelerometer supplied with a 3/8-24 to 1/4 NPT 3/4 in hex stud.

Published context and boundaries

01	Confirm the NPT mounting interface, cable interface, power source and installed Trendmaster system before installation.
02	Verify model 200150-06-CN and the complete order code on the physical label before use.
03	Match every 200150-06-CN connector, terminal, cable and companion assembly before moving field wiring.

Verification and release checks

01	Verify model 200150-06-CN and the complete order code on the physical label before use.
02	Confirm the NPT mounting interface, cable interface, power source and installed Trendmaster system before installation.
03	Match every 200150-06-CN connector, terminal, cable and companion assembly before moving field wiring.
04	Back up the applicable controller, monitor, HMI or I/O configuration before replacing 200150-06-CN.
05	Isolate energy and follow the approved site safety procedure before handling 200150-06-CN.
06	Follow ESD controls and protect 200150-06-CN connectors and printed-circuit assemblies during handling.

Identity and release controls

Verification Status	Verified Product Reference
---------------------	----------------------------

Official Bently Nevada sources

200150, 200155 and 200157 Accelerometers Datasheet	https://dam.bakerhughes.com/m/205aecc925d18534/original/200150-200155-and-200157-Accelerometers-Datasheet-164986-pdf.pdf
--	---