

330101-00-16-05-11-05

3300 XL 8 mm Proximity Probe

Bently Nevada 330101-00-16-05-11-05 is a configured 3300 XL 8 mm proximity probe. It detects shaft displacement for a matched Proximitor Sensor and machinery-monitoring channel.

Manufacturer	Bently Nevada
Product family	3300 XL 8 mm Proximity Transducer System
Part number	330101-00-16-05-11-05
Country of origin	USA
Source	3300 XL 8 mm Proximity Transducer System Datasheet — 141194 Rev. AM

Product role

- 1

Senses shaft-to-bearing displacement without physical contact
- 2

Forms the probe element of a matched eddy-current transducer loop
- 3

Carries the probe signal through the specified triaxial lead and connector
- 4

Provides a compact English-thread probe for approved-area machinery installations

Document purpose

Technical review	Model identity and manufacturer-published values
Installation review	Mounting, connection and companion-hardware checks
Commissioning review	Controlled signal, diagnostic and functional response

APTER POWER SALES TEAM

WHATSAPP / PHONE
+86 180 3023 5313

EMAIL
sales13@apterpower.com

WEBSITE
www.apterpower.com



330101-00-16-05-11-05

1. Technical specifications

The following values are transcribed only from the manufacturer records named in this document.

Mounting execution	Forward mount without armor
Probe body thread	3/8-24 UNF
Unthreaded length	0.0 in
Overall case length	1.6 in
Total probe length	0.5 m
Connector execution	Connector protector included
Cable execution	FluidLoc PFA
Agency approval option	CSA, ATEX and IECEx
Nominal probe DC resistance	7.45 +/-0.50 Ohm
Probe series	3300 XL 8 mm
Matched-system linear range	2 mm
Incremental scale factor	7.87 V/mm nominal
Frequency response	0 to 10 kHz, +0/-3 dB
Recommended operating gap	1.27 mm approximately
Recommended gap voltage	-9 Vdc approximately
Probe tip material	Polyphenylene sulfide (PPS)
Probe case material	AISI 303 or 304 stainless steel
Probe cable impedance	75 Ohm triaxial
Minimum cable bend radius	25.4 mm
Minimum flat target diameter	15.2 mm
Minimum shaft diameter	50.8 mm
Recommended shaft diameter	76.2 mm

Configuration identity checks

Complete model	330101-00-16-05-11-05
Manufacturer part	330101-00-16-05-11-05
Installed family	3300 XL 8 mm Proximity Transducer System
Record authority	141194 Rev. AM

2. System function and integration

Bently Nevada 330101-00-16-05-11-05 is a configured 3300 XL 8 mm proximity probe. It detects shaft displacement for a matched Proximity Sensor and machinery-monitoring channel.

Compatible installation elements

Component 1	3300 XL 8 mm Proximity Sensor
Component 2	matched extension cable when required
Component 3	compatible machinery-protection monitor channel
Component 4	AISI 4140 steel reference target

Engineered application matrix

Hazardous-area radial vibration measurement	Senses shaft-to-bearing displacement without physical contact
Radial shaft-vibration measurement	Forms the probe element of a matched eddy-current transducer loop
Axial position monitoring	Carries the probe signal through the specified triaxial lead and connector
Shaft centerline observation	Provides a compact English-thread probe for approved-area machinery installations

Related products on Apter Power

330106-05-30-05-02-00	3300 XL 8 mm reverse-mount probe	Open product page
330103-00-12-10-02-00	3300 XL 8 mm metric probe	Open product page
330103-00-16-10-02-05	3300 XL 8 mm approved probe	Open product page
330130-045-00-00	3300 XL extension cable	Open product page

3. Installation and commissioning controls

Install 330101-00-16-05-11-05 with the documented mechanical reach and cable route, then verify total system length, static gap, polarity and monitor scaling before enabling protection.

- 1

Verify the complete 330101-00-16-05-11-05 marking and mounting geometry before work.
- 2

Place the machine and associated protection channel in the approved maintenance state.
- 3

Keep the 3/8-24 UNF mounting surface and PPS tip free from damage and contamination.
- 4

Preserve the 0.5 m integral lead and its published minimum bend radius.
- 5

Mate the Connector protector included connection cleanly without applying tensile load.
- 6

Match the probe, extension cable and Proximitor Sensor to the engineered system length.
- 7

Set static gap within the documented linear region while maintaining shaft clearance.
- 8

Prove polarity, dynamic response and alarm action before returning protection service.

Acceptance record

Identity	330101-00-16-05-11-05 recorded
Mounting / connection	3300 XL 8 mm Proximitor Sensor
Companion hardware	matched extension cable when required
Functional duty	Hazardous-area radial vibration measurement
As-left evidence	Connections, diagnostics and controlled response recorded

Return-to-service sequence

1	Confirm physical security and connector condition
2	Restore the documented channel or system configuration
3	Observe stable diagnostics before applying a controlled test
4	Record the final process response and release authorization

4. Engineer FAQ and source record

Can parameters from a similar model be used for 330101-00-16-05-11-05?	No. Retain only values and configuration details that apply directly to the complete 330101-00-16-05-11-05 ordering code and installed system.
What maintenance evidence should be retained for 330101-00-16-05-11-05?	Retain the full 330101-00-16-05-11-05 identity, as-left mounting and connections, continuity or bias checks, diagnostics and the final functional-test result.
What should be verified before returning 330101-00-16-05-11-05 to service?	Confirm secure mounting, connector integrity, restored configuration, stable signal behavior and the intended response of the associated monitoring channel.
What must be matched before replacing 330101-00-16-05-11-05?	Match the complete 330101-00-16-05-11-05 marking, 3300 xl 8 mm proximity probe, installed mounting or connector execution and the approved equipment record before removal.
Which system components should be checked with 330101-00-16-05-11-05?	Confirm the installed 3300 XL 8 mm Proximity Sensor, matched extension cable when required and the assigned monitoring or connection point are the documented combination for 330101-00-16-05-11-05.
How should wiring or cabling for 330101-00-16-05-11-05 be recorded?	Record conductor identity, shield termination, connector orientation, cable route and the as-found diagnostic state before disconnecting 330101-00-16-05-11-05.
What installation control is important for 330101-00-16-05-11-05?	Use the model-specific mounting arrangement, protect mating surfaces and maintain the documented cable support and mechanical clearance for 330101-00-16-05-11-05.
How is 330101-00-16-05-11-05 checked during commissioning?	Apply the approved controlled test for hazardous-area radial vibration measurement, verify polarity or direction where applicable, and compare the measured response with the configured channel.

Manufacturer source identifiers

Document title	3300 XL 8 mm Proximity Transducer System Datasheet
Publication / revision	141194 Rev. AM
Manufacturer	Bently Nevada / Baker Hughes

APTER POWER SALES TEAM

WHATSAPP / PHONE
+86 180 3023 5313

EMAIL
sales13@apterpower.com

WEBSITE
www.apterpower.com



330101-00-16-05-11-05