

APTER POWER FIELD WORKBOOK

INSTALLATION | APPLICATION | VERIFICATION

3300/12-02-20-00

3300 System Power Supply

CONTROLLED ENGINEERING COPY

Install 3300/12-02-20-00 only in the documented Bently Nevada 3300 Monitoring System position and preserve the recorded connections. After installation, restore the approved configuration and complete controlled diagnostic and functional checks.

INSTALLATION IDENTITY	REQUIRED VALUE
Complete model	3300/12-02-20-00
Manufacturer part	3300/12-02-20-00
Hardware type	3300/12-02-20-00
System family	Bently Nevada 3300 Monitoring System



APTER POWER SALES TEAM

WHATSAPP / PHONE +86 180 3023 5313
EMAIL sales13@apterpower.com
WEBSITE www.apterpower.com



01 PRE-INSTALLATION PLAN

- 1

Verify the complete 3300/12-02-20-00 marking and installed position before work.
- 2

Place the connected equipment in the approved maintenance state.
- 3

Isolate applicable power and signal energy before disconnecting wiring.
- 4

Use ESD controls and protect connectors from contamination or damage.
- 5

Record as-found cable, terminal, shield and grounding identity.

MATCHED HARDWARE

- Documented host position and companion hardware
- Approved field or control wiring arrangement
- Recorded connector, shield and grounding system
- Configured monitor, controller or protection channel

INSTALLATION CONTROL RECORD

CONTROL ITEM	REQUIRED RECORD
Identity	3300/12-02-20-00 / 3300/12-02-20-00 recorded
Physical interface	Documented host position and companion hardware
Companion check	Approved field or control wiring arrangement
Functional proof	Provides the documented 3300 System Power Supply function
Application test	Bently Nevada 3300 Monitoring System installed-base service

02 WIRING & INTERFACE CHECKS

CHECK ITEM	REQUIRED VALUE
Complete catalog number	3300/12-02-20-00
Module designation	3300/12
Ordering option code	02-20-00

SYSTEM CONNECTION RECORD

CONNECTION ITEM	DOCUMENTED ASSIGNMENT
Installed host / carrier	Documented host position and companion hardware
Companion hardware	Approved field or control wiring arrangement
Field connection	Recorded connector, shield and grounding system
Primary system function	Provides the documented 3300 System Power Supply function
Controlled acceptance duty	Bently Nevada 3300 Monitoring System installed-base service

FIELD NOTE

Install 3300/12-02-20-00 only in the documented Bently Nevada 3300 Monitoring System position and preserve the recorded connections. After installation, restore the approved configuration and complete controlled diagnostic and functional checks.

03 COMMISSIONING WORKFLOW



COMMISSIONING ACCEPTANCE EVIDENCE

EVIDENCE ITEM	ACCEPTANCE CONDITION
Identity	3300/12-02-20-00 / 3300/12-02-20-00 recorded
Physical interface	Documented host position and companion hardware
Companion check	Approved field or control wiring arrangement
Functional proof	Provides the documented 3300 System Power Supply function
Application test	Bently Nevada 3300 Monitoring System installed-base service

04 RETURN-TO-SERVICE RECORD

- ☐ Restore only the approved system configuration for this exact catalog number.
- ☐ Inspect mechanical mounting and cable support before energization.
- ☐ Complete controlled diagnostics and a functional response test before release.
- ☐ Confirm the intended process response before normal operation.

VERIFICATION RECORD

PRODUCT IDENTITY	3300/12-02-20-00
INSTALLED POSITION	Documented Bently Nevada 3300 Monitoring System position
VERIFICATION METHOD	Controlled inspection and functional test
RELEASE RECORD	Final diagnostic state retained before service

RELATED PRODUCTS ON APTER POWER

MODEL	SYSTEM ROLE	APTER POWER PAGE
330106-05-30-05-02-00	3300 XL 8 mm reverse-mount probe	View 330106-05-30-05-02-00 page
330130-045-00-00	3300 XL standard extension cable	View 330130-045-00-00 page
330130-080-02-05	3300 XL extension cable	View 330130-080-02-05 page
330850-50-00	3300 XL NSv Proximitior Sensor	View 330850-50-00 page
330171-00-12-50-01-05	3300 XL 5/8 mm proximity probe	View 330171-00-12-50-01-05 page
330171-00-12-05-01-05	3300 XL 5/8 mm proximity probe	View 330171-00-12-05-01-05 page
330171-00-33-50-01-05	3300 XL 5/8 mm proximity probe	View 330171-00-33-50-01-05 page
330171-00-08-10-01-05	3300 XL 5/8 mm proximity probe	View 330171-00-08-10-01-05 page

SOURCE IDENTIFIERS

Bently Nevada 3300 System Installation and Maintenance Manual

3300 system documentation

APTER POWER SALES TEAM

WHATSAPP / PHONE	+86 180 3023 5313
EMAIL	sales13@apterpower.com
WEBSITE	www.apterpower.com

