

INDUSTRIAL AUTOMATION PRODUCT

3300/12-02-20-00

3300 System Power Supply

The module supplies the documented rack power required by installed 3300 monitoring modules.

IDENTITY	VERIFIED VALUE
Manufacturer	Bently Nevada
System family	Bently Nevada 3300 Monitoring System
Part number	3300/12-02-20-00
Country	USA
HS code	8537101190

APTER POWER SALES TEAM

WHATSAPP / PHONE +86 180 3023 5313
EMAIL sales13@apterpower.com
WEBSITE www.apterpower.com



2

Technical Specifications

Technical values below are limited to the named Bently Nevada product record.

PARAMETER	TECHNICAL VALUE
Complete catalog number	3300/12-02-20-00
Module designation	3300/12
Ordering option code	02-20-00

ENGINEERING DATA SUMMARY

DATA GROUP	VERIFIED ASSIGNMENT
Installed host / carrier	Documented host position and companion hardware
Companion hardware	Approved field or control wiring arrangement
Field connection	Recorded connector, shield and grounding system
Primary system function	Provides the documented 3300 System Power Supply function
Controlled acceptance duty	Bently Nevada 3300 Monitoring System installed-base service

3

System Role and Architecture

The module supplies the documented rack power required by installed 3300 monitoring modules.

FUNCTION 1

Provides the documented 3300 System Power Supply function

FUNCTION 2

Maintains the engineered signal or power path

FUNCTION 3

Integrates with the specified host and companion hardware

FUNCTION 4

Supports controlled diagnostics and functional verification

Matched system components

- Documented host position and companion hardware
- Approved field or control wiring arrangement
- Recorded connector, shield and grounding system
- Configured monitor, controller or protection channel

SYSTEM INTEGRATION RECORD

INTEGRATION ITEM	DOCUMENTED ROLE
Installed host / carrier	Documented host position and companion hardware
Companion hardware	Approved field or control wiring arrangement
Field connection	Recorded connector, shield and grounding system
Primary system function	Provides the documented 3300 System Power Supply function
Controlled acceptance duty	Bently Nevada 3300 Monitoring System installed-base service

4

Applications and Engineering Context

**Bently Nevada 3300 Monitoring System
installed-base service**

Provides the documented 3300 System Power Supply function

**Bently Nevada 3300 Monitoring System
compatibility review**

Maintains the engineered signal or power path

**Bently Nevada 3300 Monitoring System
installation planning**

Integrates with the specified host and companion hardware

**Bently Nevada 3300 Monitoring System
controlled commissioning**

Supports controlled diagnostics and functional verification

TECHNICAL NOTE

Install 3300/12-02-20-00 only in the documented Bently Nevada 3300 Monitoring System position and preserve the recorded connections. After installation, restore the approved configuration and complete controlled diagnostic and functional checks.

MODEL-SPECIFIC ACCEPTANCE EVIDENCE

CHECK	ACCEPTANCE CONDITION
Identity	3300/12-02-20-00 / 3300/12-02-20-00 recorded
Physical interface	Documented host position and companion hardware
Companion check	Approved field or control wiring arrangement
Functional proof	Provides the documented 3300 System Power Supply function
Application test	Bently Nevada 3300 Monitoring System installed-base service

5

Engineering Precautions

1

Verify the complete 3300/12-02-20-00 marking and installed position before work.

2

Place the connected equipment in the approved maintenance state.

3

Isolate applicable power and signal energy before disconnecting wiring.

4

Use ESD controls and protect connectors from contamination or damage.

5

Record as-found cable, terminal, shield and grounding identity.

RELATED PRODUCTS ON APTER POWER

MODEL	SYSTEM ROLE	APTER POWER PAGE
330103-00-04-10-02-00	3300 XL 8 mm metric proximity probe	View 330103-00-04-10-02-00 page
330103-00-12-10-02-00	3300 XL 8 mm metric proximity probe	View 330103-00-12-10-02-00 page
330103-00-16-10-02-05	3300 XL 8 mm metric proximity probe	View 330103-00-16-10-02-05 page
330106-05-30-05-02-00	3300 XL 8 mm reverse-mount probe	View 330106-05-30-05-02-00 page
330130-045-00-00	3300 XL standard extension cable	View 330130-045-00-00 page
330130-080-02-05	3300 XL extension cable	View 330130-080-02-05 page
330850-50-00	3300 XL NSv Proximitior Sensor	View 330850-50-00 page
330171-00-12-50-01-05	3300 XL 5/8 mm proximity probe	View 330171-00-12-50-01-05 page

MANUFACTURER SOURCE RECORD

Bently Nevada 3300 System Installation and Maintenance Manual

3300 system documentation

APTER POWER SALES TEAM

WHATSAPP / PHONE +86 180 3023 5313

EMAIL sales13@apterpower.com

WEBSITE www.apterpower.com

