

990-05-70-03-05

990 two-wire vibration transmitter

CONTROLLED ENGINEERING COPY

Verify 990-05-70-03-05, the selected full-scale vibration range, total transducer length, mounting hardware, loop polarity and alarm scaling before removal; confirm Prox Out waveform and 4–20 mA scaling after installation.

INSTALLATION IDENTITY	REQUIRED VALUE
Complete model	990-05-70-03-05
Manufacturer part	990-05-70-03-05
Hardware type	990-05-70-03-05
System family	990 vibration transmitter system
HS code	8537101190



APTER POWER SALES TEAM

WHATSAPP / PHONE +86 180 3023 5313
EMAIL sales13@apterpower.com
WEBSITE www.apterpower.com



01 PRE-INSTALLATION PLAN

- 1

Verify the complete 990-05-70-03-05 marking and its assigned 990 vibration transmitter system position before work.
- 2

Place the connected pump radial-vibration monitoring process in the approved maintenance state.
- 3

Isolate applicable power and radial vibration converted to a 4–20 ma current-loop signal field energy before disconnecting conductors.
- 4

Record connector, conductor, address, firmware and software identities before removal.
- 5

Use ESD controls and protect keyed interfaces, exposed contacts and electronic assemblies.

MATCHED HARDWARE

- 3300 NSv probe
- matched extension cable and Proximity Sensor
- 12 to 35 VDC current loop
- PLC or DCS analog input

INSTALLATION CONTROL RECORD

CONTROL ITEM	REQUIRED RECORD
Identity	990-05-70-03-05 / 990-05-70-03-05 recorded
Physical interface	3300 NSv probe
Companion check	matched extension cable and Proximity Sensor
Functional proof	Accepts a matched 3300 NSv transducer signal
Application test	Pump radial-vibration monitoring


02 WIRING & INTERFACE CHECKS

CHECK ITEM	REQUIRED VALUE
Complete model	990-05-70-03-05
Full-scale range	0 to 125 um peak-to-peak
System length	7.0 m
Mounting	DIN clips and bulkhead screws
Agency approval	Multiple approvals
Transmitter type	2-wire, loop powered
Supply voltage	+12 to +35 V DC
Process output	4 to 20 mA
Input system	3300 NSv proximity transducer system
Frequency response	5 Hz to 6 kHz, +0/-3 dB
Loop accuracy	+/-1.5%
Prox Out scale factor	7.87 mV/um (200 mV/mil)
Prox Out impedance	10 kohm for 10 Mohm load
Maximum loop lead resistance	1000 ohm at 35 V DC

FIELD NOTE

Verify 990-05-70-03-05, the selected full-scale vibration range, total transducer length, mounting hardware, loop polarity and alarm scaling before removal; confirm Prox Out waveform and 4–20 mA scaling after installation.

03 COMMISSIONING WORKFLOW

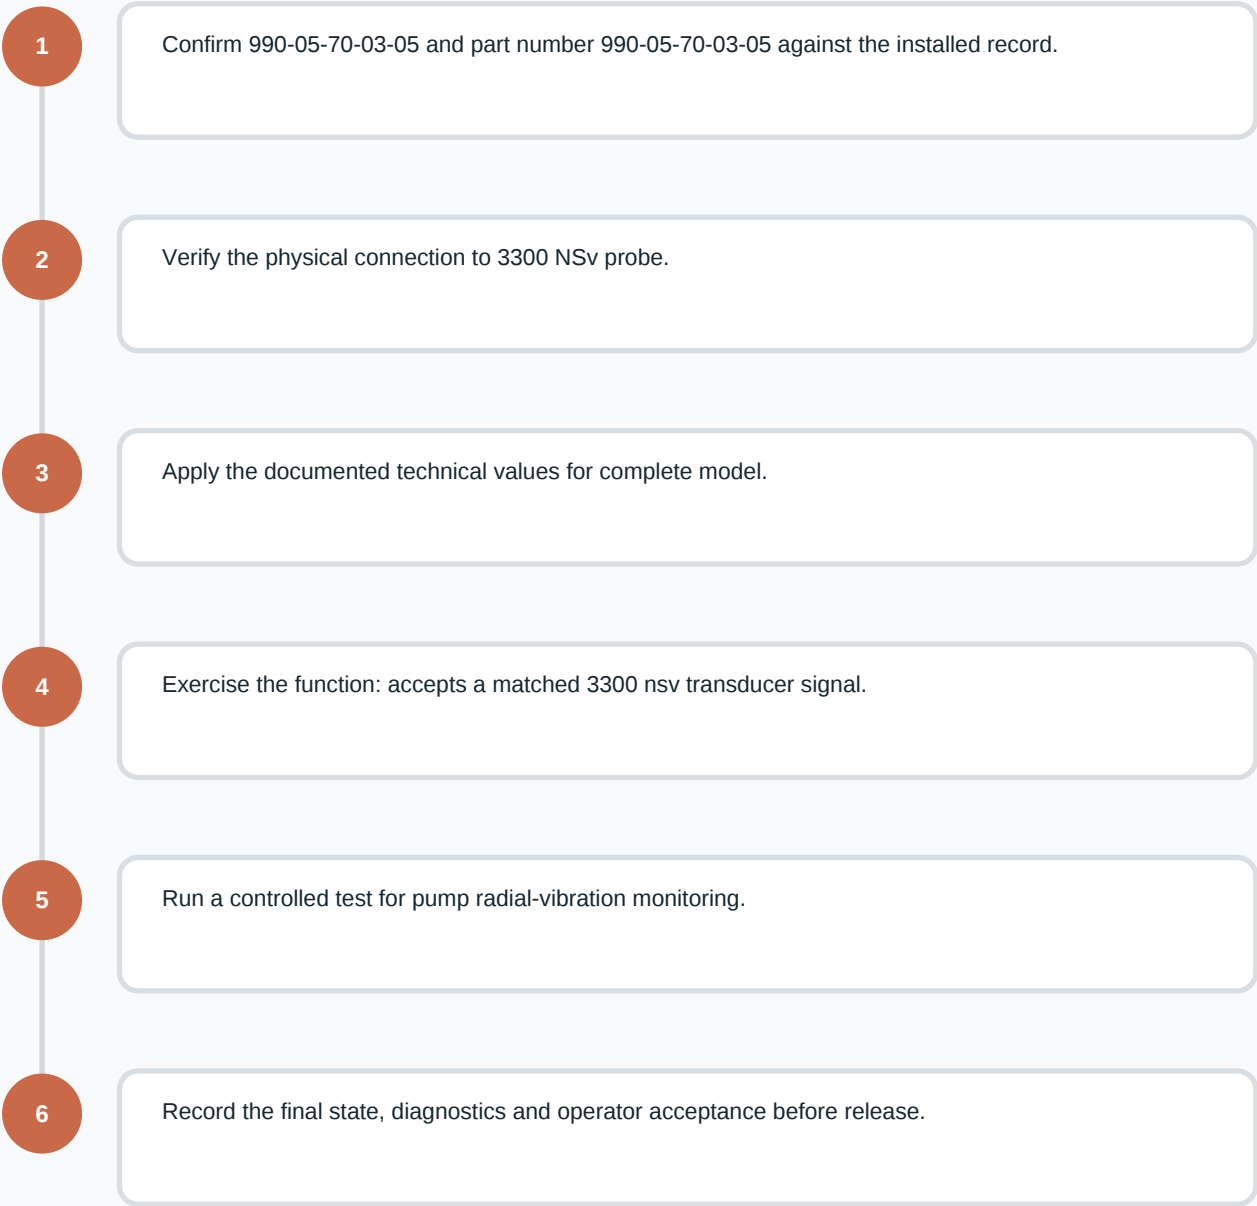

COMMISSIONING ACCEPTANCE EVIDENCE

EVIDENCE ITEM	ACCEPTANCE CONDITION
Identity	990-05-70-03-05 / 990-05-70-03-05 recorded
Physical interface	3300 NSv probe
Companion check	matched extension cable and Proximity Sensor
Functional proof	Accepts a matched 3300 NSv transducer signal
Application test	Pump radial-vibration monitoring

04 RETURN-TO-SERVICE RECORD

- ☐ Confirm the installed 3300 NSv probe and matched extension cable and Proximity Sensor against the approved project.
- ☐ Restore power in a controlled sequence and review device, network and host diagnostics.
- ☐ Prove the intended compressor shaft-vibration trending function and retain the final test result.
- ☐ Confirm the intended process response before normal operation.

VERIFICATION RECORD

PRODUCT IDENTITY	990-05-70-03-05
INSTALLED POSITION	Documented 990 vibration transmitter system position
VERIFICATION METHOD	Controlled inspection and functional test
RELEASE RECORD	Final diagnostic state retained before service

RELATED PRODUCTS ON APTER POWER

MODEL	SYSTEM ROLE	APTER POWER PAGE
Bently Nevada 330180 X1 05 MOD 145347 05	Related Bently Nevada machinery-monitoring product	View Bently Nevada 330180 X1 05 MOD 145347 05 page
Bently Nevada 146054 034 20 02 05	Related Bently Nevada machinery-monitoring product	View Bently Nevada 146054 034 20 02 05 page
Bently Nevada 330171 XX XX 10 02 05 MOD 142824 100	Related Bently Nevada machinery-monitoring product	View Bently Nevada 330171 XX XX 10 02 05 MOD 142824 100 page
Bently Nevada 330877 80 36 00	Related Bently Nevada machinery-monitoring product	View Bently Nevada 330877 80 36 00 page
Bently Nevada 330878 X0 00 MOD 177889 01	Related Bently Nevada machinery-monitoring product	View Bently Nevada 330878 X0 00 MOD 177889 01 page
Bently Nevada 330851 04 00 27 10 01 00	Related Bently Nevada machinery-monitoring product	View Bently Nevada 330851 04 00 27 10 01 00 page
Bently Nevada 84508 30	Related Bently Nevada machinery-monitoring product	View Bently Nevada 84508 30 page
Bently Nevada 330876 01 10 00 00	Related Bently Nevada machinery-monitoring product	View Bently Nevada 330876 01 10 00 00 page

SOURCE IDENTIFIERS

Bently Nevada 990 Vibration Transmitter Datasheet
141612 Rev. Y

APTER POWER SALES TEAM

WHATSAPP / PHONE	+86 180 3023 5313
EMAIL	sales13@apterpower.com
WEBSITE	www.apterpower.com

