

X20(c)HB8884

Data sheet
2.31 (August 2025)



Publishing information

B&R Industrial Automation GmbH

B&R Strasse 1

5142 Eggelsberg

Austria

Telephone: +43 7748 6586-0

Fax: +43 7748 6586-26

office@br-automation.com

Disclaimer

All information in this document is current as of its creation. The contents of this document are subject to change without notice. B&R Industrial Automation GmbH assumes unlimited liability in particular for technical or editorial errors in this document only (i) in the event of gross negligence or (ii) for culpably inflicted personal injury. Beyond that, liability is excluded to the extent permitted by law. Liability in cases in which the law stipulates mandatory unlimited liability (such as product liability) remains unaffected. Liability for indirect damage, consequential damage, business interruption, loss of profit or loss of information and data is excluded, in particular for damage that is directly or indirectly attributable to the delivery, performance and use of this material.

B&R Industrial Automation GmbH notes that the software and hardware designations and brand names of the respective companies used in this document are subject to general trademark, brand or patent protection.

Hardware and software from third-party suppliers referenced in this document is subject exclusively to the respective terms of use of these third-party providers. B&R Industrial Automation GmbH assumes no liability in this regard. Any recommendations made by B&R Industrial Automation GmbH are not contractual content, but merely non-binding information for which no liability is assumed. When using hardware and software from third-party suppliers, the relevant user documentation of these third-party suppliers must additionally be consulted and, in particular, the safety guidelines and technical specifications contained therein must be observed. The compatibility of the products from B&R Industrial Automation GmbH described in this document with hardware and software from third-party suppliers is not contractual content unless this has been separately agreed in individual cases; in this respect, warranty for such compatibility is excluded in any case, and it is the sole responsibility of the customer to verify this compatibility in advance.

1248269446255-2.31

1 General information

1.1 Other applicable documents

For additional and supplementary information, see the following documents.

Other applicable documents

Document name	Title
MAX20	X20 System users manual

Additional documentation

Document name	Title
MAREDSYS	Redundancy for control systems

1.2 Coated modules

Coated modules are X20 modules with a protective coating for the electronics component. This coating protects X20c modules from condensation and corrosive gases.

The modules' electronics are fully compatible with the corresponding X20 modules.



For simplification purposes, only images and module IDs of uncoated modules are used in this data sheet.

The coating has been certified according to the following standards:

- Condensation: BMW GS 95011-4, 2x 1 cycle
- Corrosive gas: EN 60068-2-60, method 4, exposure 21 days



1.2.1 Starting temperature

The starting temperature describes the minimum permissible ambient temperature in a voltage-free state at the time the coated module is switched on. This is permitted to be as low as -40°C. During operation, the conditions as specified in the technical data continue to apply.



Information:

It is important to absolutely ensure that there is no forced cooling by air currents in the closed control cabinet, e.g. due to the use of a fan or ventilation slots.

1.3 Order data

Order number	Short description	Figure
X20 redundancy systems		
X20HB8884	X20 Compact link selector, 2x RJ45, order bus base, power supply module and terminal block separately!	
X20cHB8884	X20 Compact link selector, coated, 2x RJ45, order bus base, power supply module and terminal block separately!	
Required accessories		
System modules for X20 hub systems		
X20HB2880	X20 hub expansion module, integrated 2-port hub, 2x RJ45	
X20PS8002	X20 power supply module, for standalone hub and compact link selector	
X20cHB2880	X20 hub expansion module, coated, integrated 2-port hub, 2x RJ45	
X20cPS8002	X20 power supply module, coated, for standalone hub and compact link selector	
System modules for X20 redundancy systems		
X20HB2885	X20 hub expansion module, integrated active 2-port hub, 2x RJ45	
X20cHB2885	X20 hub expansion module, coated, integrated active 2-port hub, 2x RJ45	
System modules for expandable bus controllers		
X20B881	X20 bus base, for X20 base module (BC, HB, etc.) and X20 power supply module, with one expansion slot for X20 add-on module (IF, HB, etc.), X20 end cover plates (left and right) X20AC05L1/X20AC05R1 included	
X20B882	X20 bus base, for X20 base module (BC, HB, etc.) and X20 power supply module, with 2 expansion slots for 2 X20 add-on modules (IF, HB, etc.), X20 end cover plates (left and right) X20AC05L1/X20AC05R1 included	
X20cB881	X20 bus base, coated, for X20 base module (BC, HB, etc.) and X20 power supply module, with one expansion slot for X20 add-on module (IF, HB, etc.), X20 end cover plates (left and right) X20AC05L1/X20AC05R1 included	
X20cB882	X20 bus base, coated, for X20 base module (BC, HB, etc.) and X20 power supply module, with 2 expansion slots for 2 X20 add-on modules (IF, HB, etc.), X20 end cover plates (left and right) X20AC05L1/X20AC05R1 included	
Terminal blocks		
X20TBM2	X20 terminal block, 12-pin, 24 VDC keyed	

Table 1: X20HB8884, X20cHB8884 - Order data

1.4 Module description

With the compact link selector module, it is possible to connect any POWERLINK device to a redundant POWERLINK network.

Functions:

- POWERLINK
- POWERLINK redundancy system

POWERLINK

POWERLINK is a standard protocol for Fast Ethernet equipped with hard real-time characteristics.

Redundancy system

In cable redundancy systems, data is fed into 2 cable lines simultaneously via a corresponding mechanism.

In ring redundancy systems, multiple nodes are connected within a ring and data packets can be transmitted in both directions if needed.

2 Technical description

2.1 Technical data

Order number	X20HB8884		X20cHB8884
Short description			
POWERLINK compact link selector	Connects POWERLINK devices to a redundant POWERLINK network		
General information			
Status indicators	Module status, bus function		
Diagnostics			
Module status	Yes, using LED status indicator		
Bus function	Yes, using LED status indicator		
Power consumption	2 W		
Certifications			
CE	Yes		
UKCA	Yes		
ATEX	Zone 2, II 3G Ex nA nC IIA T5 Gc IP20, Ta (see X20 user's manual) FTZU 09 ATEX 0083X cULus E115287		
UL	Industrial control equipment cCSAus 244665		
HazLoc	Process control equipment for hazardous locations Class I, Division 2, Groups ABCD, T5		
DNV	Temperature: B (0 to 55°C) Humidity: B (up to 100%) Vibration: B (4 g) EMC: B (bridge and open deck)		
CCS	Yes	-	
LR	ENV1		
KR	Yes		
ABS	Yes		
BV	EC338 Temperature: 5 - 55°C Vibration: 4 g EMC: Bridge and open deck		
KC	Yes	-	
Interfaces			
Type	POWERLINK compact link selector		
Variant	2x shielded RJ45		
Line length	Max. 100 m between 2 stations (segment length)		
Transfer rate	100 Mbit/s		
Transfer			
Physical layer	100BASE-TX		
Half-duplex	Yes		
Full-duplex	No		
Autonegotiation	Yes		
Auto-MDI/MDIX	Yes		
Hub propagation delay	0.90 to 1 µs		
Electrical properties			
Electrical isolation	Power supply isolated from POWERLINK (IF1 and IF2)		
Operating conditions			
Mounting orientation			
Horizontal	Yes		
Vertical	Yes		
Installation elevation above sea level			
0 to 2000 m	No limitation		
>2000 m	Reduction of ambient temperature by 0.5°C per 100 m		
Degree of protection per EN 60529	IP20		
Ambient conditions			
Temperature			
Operation			
Horizontal mounting orientation	-25 to 60°C		
Vertical mounting orientation	-25 to 50°C		
Derating	-		
Starting temperature	-	Yes, -40°C	
Storage	-40 to 85°C		
Transport	-40 to 85°C		

Table 2: X20HB8884, X20cHB8884 - Technical data


Technical description

Order number	X20HB88B4	X20cHB88B4
Relative humidity		
Operation	5 to 95%, non-condensing	Up to 100%, condensing
Storage	5 to 95%, non-condensing	
Transport	5 to 95%, non-condensing	
Mechanical properties		
Note	Order 1x terminal block X20TB12 separately. Order 1x power supply module X20PS8002 separately. Order 1x hub expansion module X20HB2880 or 2x hub expansion module X20HB2885. Order 1x bus base X20B-B81 or X20B882 separately.	Order 1x terminal block X20TB12 separately. Order 1x power supply module X20PS8002 separately. Order 1x hub expansion module X20cHB2880 or 2x hub expansion module X20cHB2885. Order 1x bus base X20cB-B81 or X20cB882 separately.
Pitch ¹⁾		
X20B881		62.5 ^{+0.2} mm
X20B882		87.5 ^{+0.2} mm

Table 2: X20HB88B4, X20cHB88B4 - Technical data

- 1) Pitch is based on the width of bus base X20B881 or X20B882. 1 X20HB2880 hub expansion module or 2 X20HB2885 hub expansion modules and 1 X20PS8002 power supply module are also always required for the compact link selector.

2.2 Operating and connection elements

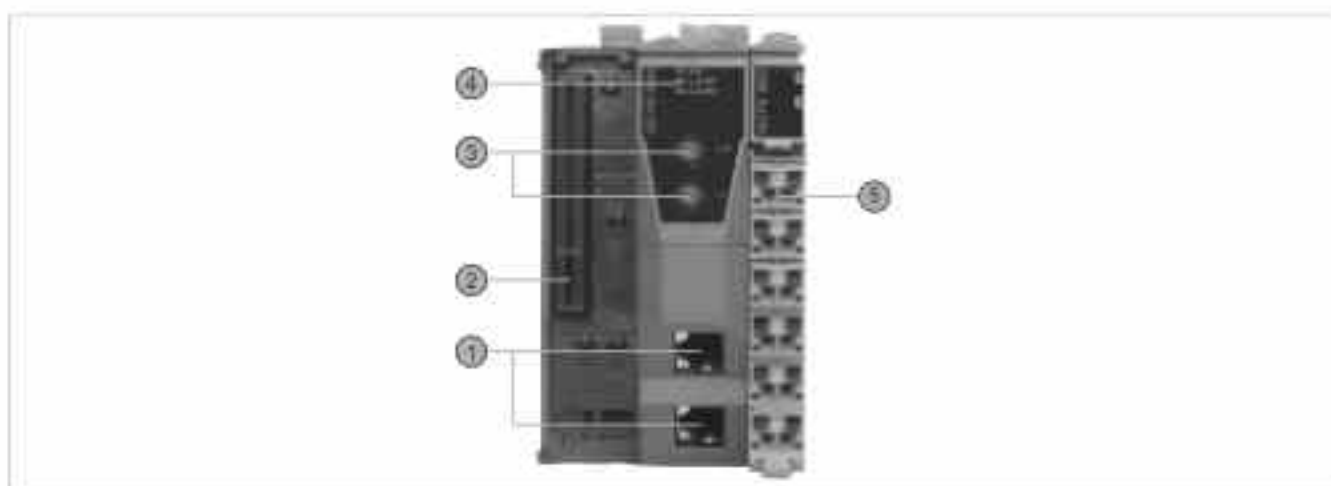

1	POWERLINK connection with 2x RJ45 for simple wiring	2	Slot for hub expansion module
3	POWERLINK node number	4	LED status indicators
5	Terminal block for compact link selector power supply	6	-

2.2.1 LED status indicators

Figure	LED	Color	Status	Description
	S/E ¹⁾	Green	On	An active POWERLINK network was detected on both networks.
		Red	Single flash	Network 2 is active. Disturbances detected on network 1 or there is no POWERLINK network active.
			Double flash	Network 1 is active. Disturbances detected on network 2 or there is no POWERLINK network active.
				Several red blinking signals are displayed immediately after the device is switched on. This is not an error, however.
	L/A IFx	Green	On	Failure of both networks.
			Blinking	A link to the peer station has been established. The LED blinks when Ethernet activity is taking place on the bus.
			On	A link to the remote station has been established.

- 1) The Status/Error LED is a green/red dual LED.

2.2.2 POWERLINK node numbers



The number switches have no function during operation. They are only used for product testing.

2.2.3 Ethernet interface

For information about wiring X20 modules with an Ethernet interface, see section "Mechanical and electrical configuration - Wiring guidelines for X20 modules with Ethernet cables" in the X20 user's manual.



Interface	Pin	Ethernet	Pinout
 Shielded RJ45	1	RXD	Receive data
	2	RXD\	Receive data\
	3	TXD	Transmit data
	4	Termination	
	5	Termination	
	6	TXD\	Transmit data\
	7	Termination	
	8	Termination	

3 Function description

3.1 POWERLINK

POWERLINK is an Ethernet-based, real-time capable fieldbus. POWERLINK extends the IEEE 802.3 Ethernet standard by a deterministic access method and also defines a CANopen-compatible fieldbus interface. POWERLINK distinguishes between process and service data in the same way as CANopen. Process data (PDO) is exchanged cyclically in the cyclic phase, while service data (SDO) is transferred acyclically. Service data objects are transmitted in the acyclic phases of POWERLINK using a connection-oriented protocol. The cyclic transfer of data in PDOs is enabled by "mapping".

For additional information, see [POWERLINK bus controller user's manual](#) and www.br-automation.com/en/technologies/powerlink.

3.2 POWERLINK redundancy system

It is often indispensable to have redundant network cabling, especially in systems that handle technical processes. The potential for danger, especially to the lines that run through the system, is disproportionately high in relation to the need to keep communication active in all operating situations. This risk is effectively reduced with double cabling that is routed separately.

The POWERLINK cable redundancy system is based on the principle of doubling transfer paths and their constant and simultaneous monitoring. This means that data is fed into 2 cable lines simultaneously via a corresponding mechanism. The same mechanisms are used to receive these telegrams again from the redundant network. In contrast to ring redundancy, cable redundancy eliminates the sometimes problematic cable return routing. The design of arbitrary tree structures is therefore possible.



Information:

Details about the structure of a redundancy system can be found in the "Redundancy for control systems" user's manual. The user's manual is available in the Downloads section of the B&R website www.br-automation.com.

3.2.1 Link selector

POWERLINK can be used to implement systems with redundant cable routing. Data is always transferred via the best quality network line using the link selector function built into the device.