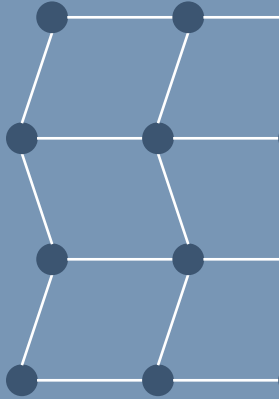


MANUFACTURER-SOURCE TECHNICAL REFERENCE

Bently Nevada 86517-XX-XX-01-02 Mod 159840-1

86517-XX-XX-01-02 Mod 159840-1 Requested-Label Verification Evidence-Bounded Product Information Manual

Baker Hughes / Bently Nevada requested 86517 accelerometer-interface
modification label

**DOCUMENT SCOPE**

Independent Apter Power manual compiled only from the cited Baker Hughes / Bently Nevada manufacturer sources.
No product photograph is included.

Product / lookup identity	Bently Nevada 86517-XX-XX-01-02 Mod 159840-1
Reference number	86517-XX-XX-01-02 Mod 159840-1
Document basis	Published Baker Hughes / Bently Nevada product records, PDFs, and manuals listed on page 3

**Product page**

<https://www.apterpower.com/Bently-Nevada/86517-xx-xx-01-02-mod-159840-1>
Apter Power contact

sales13@apterpower.com | +86 180 3023 5313

Workflow and system context

Bently Nevada 86517-XX-XX-01-02 Mod 159840-1 is an evidence-bounded requested 86517 accelerometer-interface modification label. System role: It interfaces a compatible transducer or charge-amplifier signal into the approved monitoring architecture, subject to the exact installed drawing.

- | | |
|----|--|
| 01 | System Inputs: It interfaces a compatible transducer or charge-amplifier signal into the approved monitoring architecture, subject to the exact installed drawing. |
| 02 | Processing: Use only with the exact host, terminal base, cable, firmware and engineering configuration documented for the installed system. |

Published context and boundaries

- | | |
|----|---|
| 01 | Verify the complete Bently Nevada 86517-XX-XX-01-02 Mod 159840-1 physical label and installed-system documentation before use. |
| 02 | Do not assign sensitivity, input type, supply, output, channel count or modification behavior until the complete label and approved project documentation are verified. |
| 03 | Origin and HS code remain unpublished unless an exact manufacturer record or the physical package label establishes them. |

Verification and release checks

01	Verify the complete Bently Nevada 86517-XX-XX-01-02 Mod 159840-1 label, revision and installed-system documentation before use.
02	Do not assign sensitivity, input type, supply, output, channel count or modification behavior until the complete label and approved project documentation are verified.
03	De-energize the equipment and follow the site's approved electrical and process-safety procedure before disturbing hardware or wiring.
04	Back up controller, drive, network and configuration data before replacement, migration or firmware work.
05	Verify every companion module, cable, connector, termination and power source from approved drawings.
06	Do not copy electrical, communication, mechanical or lifecycle values from a related model or successor.

Identity and release controls

Verification Status	Requested Label Verification
---------------------	------------------------------



Official Baker Hughes / Bently Nevada sources

Orbit 60 Dynamic Input Modules Datasheet	https://dam.bakerhughes.com/m/4fe8cb8354001864/original/ORBIT-60-SERIES-Dynamic-Input-Modules-Datasheet-137M0698.pdf
--	---