


MANUFACTURER-SOURCE TECHNICAL REFERENCE

Honeywell 10105/2/1

10105/2/1 Product Information Manual

fail-safe high-density analog input module

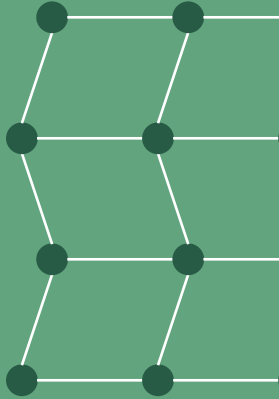

DOCUMENT SCOPE

Independent Apter Power manual limited to verified identity evidence and any directly relevant Honeywell sources listed in this document. No product photograph is included.

Product / lookup identity	Honeywell 10105/2/1
Reference number	10105/2/1
Document basis	Published Honeywell product records, PDFs, and manuals listed on page 3



Product page

<https://www.apterpower.com/Honeywell/10105-2-1>
Apter Power contact

sales13@apterpower.com | +86 180 3023 5313

Workflow and system context

Honeywell 10105/2/1 is a 16-channel fail-safe analog input module for the FSC system. Use 10105/2/1 only with the exact host, rack or chassis, terminal hardware, cable and project configuration specified for the installed system.

- | | |
|----|---|
| 01 | System Inputs: fail-safe high-density analog input module |
| 02 | Processing: Use 10105/2/1 only with the exact host, rack or chassis, terminal hardware, cable and project configuration specified for the installed system. |

Published context and boundaries

- | | |
|----|---|
| 01 | Use 10105/2/1 only with the exact host, rack or chassis, terminal hardware, cable and project configuration specified for the installed system. |
| 02 | Lifecycle evidence boundary: Use the cited model-level lifecycle statement where supplied. |
| 03 | Verify the complete Honeywell 10105/2/1 physical label before use. |



Verification and release checks

01	Verify the complete Honeywell 10105/2/1 physical label before use.
02	Use 10105/2/1 only with the exact host, rack or chassis, terminal hardware, cable and project configuration specified for the installed system.
03	Confirm the exact rack or chassis position, terminal assembly, cable, connector, power and project revision.
04	De-energize the equipment unless the exact hardware manual and site procedure explicitly permit energized service.
05	Back up controller, communication and I/O configuration before replacement or migration work.
06	Do not transfer electrical, communication or mechanical values from a related model or different suffix.

Identity and release controls

Verification Status	Verified Product Reference
---------------------	----------------------------