

Westinghouse 5X00119G01

Installation & Commissioning Guide

Westinghouse 5X00119G01 serves as a rtd input electronics module in the Ovation I/O subsystem. It interfaces resistance-temperature detector input with 5X00121G01 RTD personality module.

PRODUCT ROLE AND VERIFIED FEATURES

Feature 1

Provides eight RTD channels for the documented rtd input electronics module function.

Feature 2

Handles resistance-temperature detector input through the specified Ovation I/O subsystem.

Feature 3

Works with 5X00121G01 RTD personality module.


Feature 4

On-demand self-calibration and channel error reporting support controlled commissioning and diagnostics.

VERIFIED DATA SNAPSHOT

Channels	8 RTD inputs
Wiring modes	3-wire or 4-wire, channel configurable
Resolution	12 bits
Sampling	16.67/s at 50 Hz or 20/s at 60 Hz under normal operation

SYSTEM RELATIONSHIP

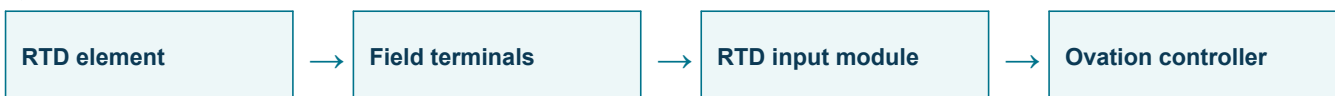

APTERPOWER SALES TEAM
WhatsApp / Phone: +86 180 3023 5313
Email: sales13@apterpower.com
Scan the approved WhatsApp code for model-specific support.



Pre-installation readiness

READINESS GATE

Identity Compare the complete marking with the approved work order and installed record.	System match Confirm the receiving channel, mating components and controlled configuration.
Physical condition Inspect mounting surfaces, connectors, terminals, cable and support hardware.	Work controls Apply authorized isolation, bypass, access and restoration procedures.

TECHNICAL PROFILE FOR THE WORK

Channels 8 RTD inputs	Wiring modes 3-wire or 4-wire, channel configurable
Resolution 12 bits	Sampling 16.67/s at 50 Hz or 20/s at 60 Hz under normal operation
Required personality module 5X00121G01 only	

IMPORTANT NOTICE

Resolve every unmatched interface, configuration or receiving-system condition before removal or installation.

SOURCE AND WORK CONTROLS

Manufacturer source	Emerson Process Management, Ovation Interim Publication Update IPU-243, Eight Channel RTD Module, April 2003.
Evidence boundary	Technical statements are limited to the identified product or applicable manufacturer family.
Selection control	Use the complete ordering string and verify the installed system before purchase or installation.

APTERPOWER SALES TEAM
WhatsApp / Phone: +86 180 3023 5313
Email: sales13@apterpower.com
Scan the approved WhatsApp code for model-specific support.



Installation sequence

CONTROLLED WORK STEPS

- 01 Match the complete 5X00119G01 marking to the work order and installed position before removal.
- 02 Confirm 5X00121G01 RTD personality module before making or breaking any field connection.
- 03 Keep the assigned resistance-temperature detector input within the documented subsystem and range.
- 04 Record terminal designations, polarity, common and shield treatment before disconnecting conductors.
- 05 Inspect module seating, connector keying, terminal condition and strain relief before power is restored.
- 06 Restore the controlled channel configuration, range selection and alarm or timeout behavior after installation.
- 07 Check local indicators and controller diagnostics for internal, communication or channel faults during commissioning.
- 08 Prove the intended response across eight RTD channels and record the acceptance result before release.

CONNECTION RECORD

As found	Photograph and label every connection and installed orientation before removal.
Mechanical	Record mounting position, support, clearance and connector engagement.
Electrical	Record polarity, common, shield, channel assignment and cable route.
Configuration	Preserve approved settings, scaling, alarm logic and acceptance limits.
As left	Record the final physical condition and any controlled deviation.



WORK HOLD POINTS

Before removal	Identity, position, wiring, orientation and controlled settings recorded.
Before connection	Mating interfaces, condition and routing reviewed.
Before power-up	Mechanical work, wiring, shielding and configuration independently checked.
Before release	Static value, dynamic response and protection behavior accepted.

Commissioning and functional proof

COMMISSIONING SEQUENCE

Initial state Observe status at power-up and check for unexpected fault or alarm indication.	Static value Verify the expected bias, gap, loop, contact or channel value for the application.
Dynamic response Apply the approved machine or test stimulus and confirm response and scaling.	Protection path Verify the configured alarm, relay, data or receiving-system behavior.

APPLICATION-SPECIFIC EVIDENCE

Installed-base maintenance Restores the documented rtd input electronics module position without changing the approved system architecture.	Loop or channel service Supports verification of resistance-temperature detector input at the assigned control-system channel.
Planned replacement Provides an exact-identity replacement path when 5X00121G01 RTD personality module and the field interface have been confirmed.	Commissioning support Allows the responsible engineer to prove wiring, configuration, status and response for eight RTD channels.

ACCEPTANCE RECORD

Identity	Complete marking and final installed position recorded.
Physical inspection	Mounting, connectors, terminals and routing checked.
Channel status	Expected status and configured measurement confirmed.
Functional test	Required output or protection response demonstrated.
Restoration	Bypasses removed and operating state approved.

COMMISSIONING QUESTIONS

What function does Westinghouse 5X00119G01 perform?	It converts eight resistance-temperature detector inputs to digital data for the Ovation controller using the dedicated 5X00121G01 field interface.
How many channels are associated with Westinghouse 5X00119G01?	The documented configuration provides eight RTD channels.

Release record and technical references

CLOSEOUT QUESTIONS

Which signal path is used by Westinghouse 5X00119G01?	It is used for resistance-temperature detector input within the specified subsystem.
Which companion hardware must be checked for Westinghouse 5X00119G01?	Confirm 5X00121G01 RTD personality module and the project-specific base or terminal arrangement.
What technical values should be verified before installing Westinghouse 5X00119G01?	Verify 8 RTD inputs; also confirm 3-wire or 4-wire, channel configurable and every applicable range or wiring selection.
What connection details should be recorded for Westinghouse 5X00119G01?	Record terminal identifiers, polarity, common, shield termination, connector keying and the assigned channel before disconnection.
Which diagnostics should be reviewed when commissioning Westinghouse 5X00119G01?	Review the applicable power, communication, internal-fault and channel-status indications, then compare the controller status with the expected field condition.
Can a nearby ordering code replace Westinghouse 5X00119G01 without an engineering check?	No. Match the complete identifier, companion hardware, signal range, wiring and controlled project configuration before substitution.

RELATED MODELS FOR INSTALLATION PLANNING

Foxboro AD916AG FBM204	Installation-planning reference. Review the complete ordering string before selection.
Westinghouse 1C31122G01	Installation-planning reference. Compare the required interface and system position.
Westinghouse 1C31132G01	Installation-planning reference. Confirm the execution independently for the intended task.

MANUFACTURER SOURCE AND FINAL CONTROL

Manufacturer source	Emerson Process Management, Ovation Interim Publication Update IPU-243, Eight Channel RTD Module, April 2003.
Evidence boundary	Technical statements are limited to the identified product or applicable manufacturer family.
Selection control	Use the complete ordering string and verify the installed system before purchase or installation.

IMPORTANT NOTICE

Release the equipment only after the responsible site authority accepts the recorded result.

APTERPOWER SALES TEAM
WhatsApp / Phone: +86 180 3023 5313
Email: sales13@apterpower.com
Scan the approved WhatsApp code for model-specific support.

