Installation Instructions

Kinetix 6000 Shunt Module

Catalog Number 2094-BSP2

Topic	Page
About the Kinetix 6000 Shunt Module	1
Important User Information	2
Before You Begin	3
Install the Kinetix 6000 Shunt Module	3
Connector Data	7
Power Wiring Requirements	8
Additional Resources	9

About the Kinetix 6000 Shunt Module

The Bulletin 2094 shunt module provides 200 W shunting capacity for applications where the internal Kinetix 6000 integrated axis (IAM) module or axis (AM) module shunt capacity is exceeded. The Kinetix 6000 shunt module is compatible with all 230V and 460V Kinetix 6000 drive systems and mounts on the Bulletin 2094 power rail.

IMPORTANT

Use the 2094-BSP2 shunt module in any single Kinetix 6000 power rail system and in common-bus applications where the IAM module is the common-bus leader drive. You cannot use the 2094-BSP2 shunt module in common-bus applications where the IAM module is the common-bus follower drive.

You cannot mount more than one 2094-BSP2 shunt module on the power rail.

Refer to the Kinetix 6000 Multi-axis Servo Drive User Manual, publication 2094-UM001, for detailed information on wiring, applying power, troubleshooting, and integration with ControlLogix, CompactLogix, or SoftLogix controller platforms.

Before You Begin

Remove all packing material, wedges, and braces from within and around the components. After unpacking, check the item nameplate catalog number against the purchase order.

Parts List

Drive Component	Ships With
Shunt Module	• Wiring plug for an external shunt resistor (RC). • Wiring plug for the thermal switch (TS). • These installation instructions, publication 2094-IN004.

Install the Kinetix 6000 Shunt Module

These procedures assume you have prepared your panel, mounted your Bulletin 2094 power rail, and understand how to bond your system. For installation instructions regarding equipment and accessories not included here, refer to the instructions that came with those products.

SHOCK HAZARD



To avoid hazard of electrical shock, perform all mounting and wiring of the Bulletin 2094 power rail and drive modules prior to applying power. Once power is applied, connector terminals may have voltage present even when not in use.

ATTENTION




Plan the installation of your system so that you can perform all cutting, drilling, tapping, and welding with the system removed from the enclosure. Because the system is of the open type construction, be careful to keep any metal debris from falling into it. Metal debris or other foreign matter can become lodged in the circuitry, which can result in damage to components.

Connector pins on the Bulletin 2094 power rail are covered with a protective boot. To avoid damage to the power rail during installation, do not remove the protective boot until you are ready to mount your shunt module.

Determining Mounting Order

Mount the IAM, AM, shunt, and slot-filler modules in the order (left to right) as shown. Mount axis modules according to power utilization (highest to lowest) from left to right starting with the highest power utilization. If power utilization is unknown, position axis modules (highest to lowest) from left to right based on amp rating.

Module Mounting Order Example

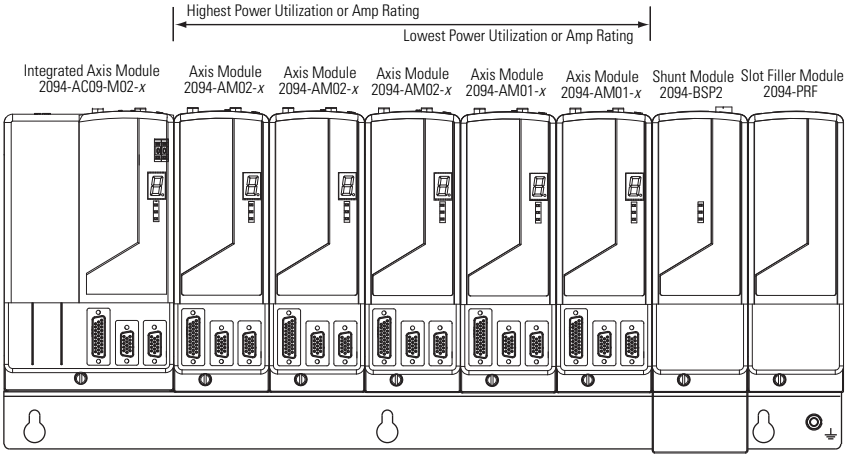

IMPORTANT

The IAM module must be positioned in the leftmost slot of the power rail. Position your AM modules, shunt module, and slot-filler modules to the right of the IAM module.

The shunt module must be installed to the right of the last AM module. Only slot-filler modules may be installed to the right of the shunt module.

Do not mount the shunt module on power rails with a follower IAM module. Common-bus follower IAM modules disable the internal, rail mounted, and external shunt modules.

SHOCK HAZARD



To avoid personal injury due to electrical shock, place a 2094-PRF slot-filler module in all empty slots on the power rail.

Any power rail connector without a module installed will disable the Kinetix 6000 system, however, control power will still be present.

Mount the Kinetix 6000 Shunt Module

Follow these steps to mount your 2094-BSP2 shunt module.

TIP All modules mount to the power rail by using the same technique, however, the IAM module is shown in this example.

1. Remove the protective boot from the power rail connector.

IMPORTANT The shunt module must be positioned to the right of the IAM and AM modules.

2. Remove the label (applied to back and side of module) covering the pins that mate with the power rail.


ATTENTION




To avoid damage to the pins located on the back of the shunt module and to make sure that module pins mate properly with the power rail, hang modules as shown in steps 3…6.

The power rail must be mounted vertically on the panel before hanging modules on the power rail. Do not mount modules if the power rail is horizontal.


3. Hang the mounting bracket from the slot on the power rail.

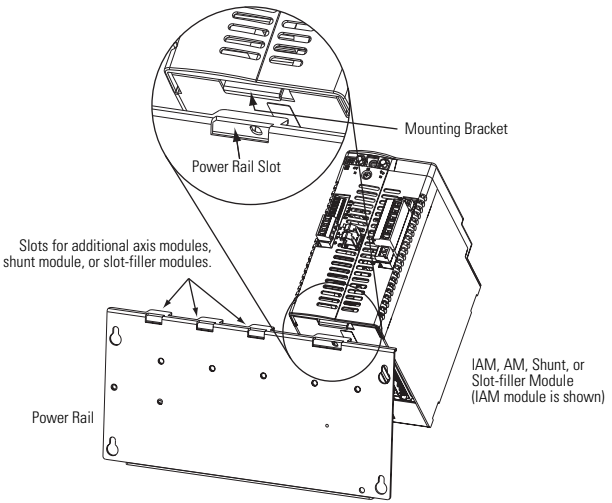


4. Pivot module downward and align the guide pins on the power rail with the guide pin holes in the back of the module.

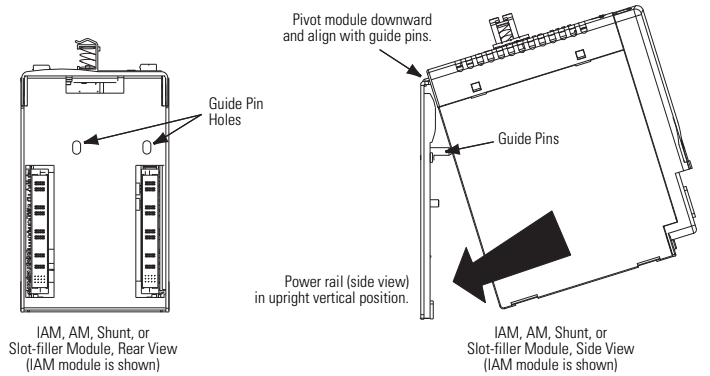

5. Gently push the module against the power rail connectors and into the final mounting position.

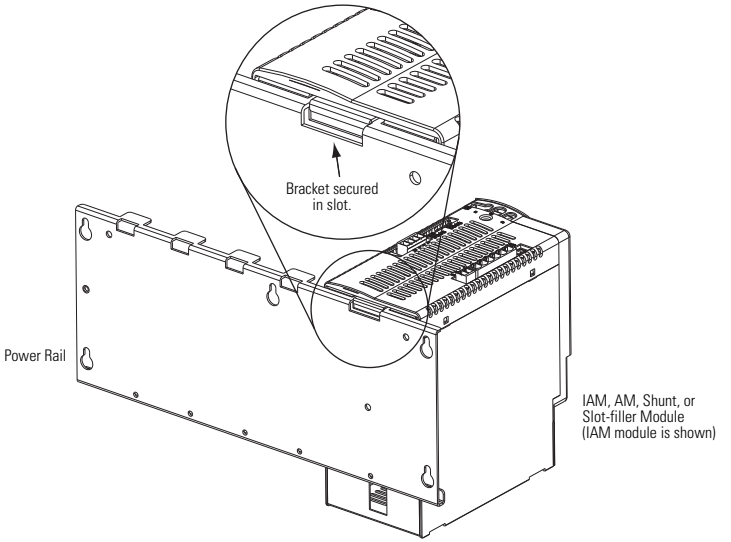


6. Use 2.26 N•m (20 lb•in) torque to tighten the mounting screw.

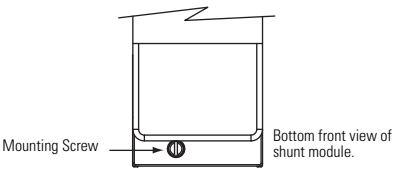

Connector Data

The Kinetix 6000 shunt module is compatible with all 230V and 460V drive systems.

Shunt Module Connectors and Indicators

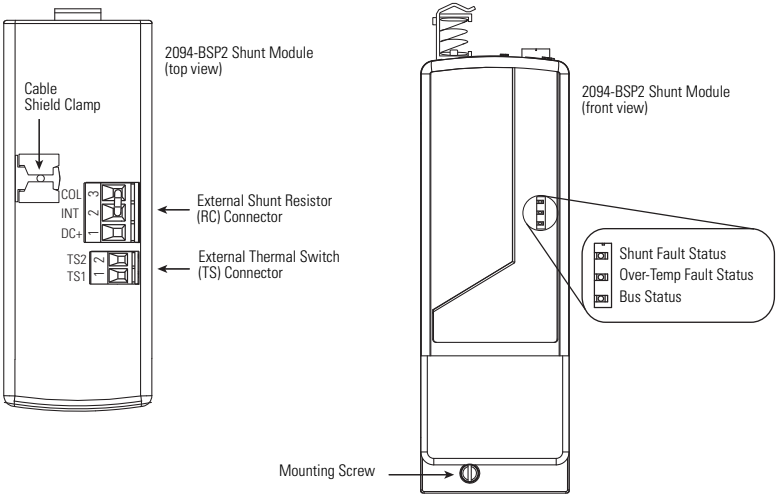

Shunt Module Connectors

Designator	Description	Connector
RC	External shunt resistor connector	Three-position connector housing
TS	Thermal switch connector	Two-position connector housing

External Shunt Resistor (RC) Connector Pinout

RC Pin	Description	Signal
1	External shunt resistor connection	DC+
2	Internal shunt connection	INT
3	Shunt collector connection	COL

External Thermal Switch (TS) Connector Pinout

TS Pin	Description	Signal
1	External passive shunt module thermal switch connections	TS1
2		TS2

Power Wiring Requirements

IMPORTANT The National Electrical Code and local electrical codes take precedence over the values and methods provided.


Shunt Module Power Wiring Requirements

Connections	Terminals		Recommended Wire Size mm^2 (AWG)	Torque Value N•m (lb•in)
	Pin	Signal		
1394-SR*xxxx* External passive shunt module	RC-1	DC+	10 (8) (1)	1.2…1.5 (10.6…13.2)
	RC-2	INT		
	RC-3	COL		
Thermal switch	TS-1	TS1	0.75 (18)	0.22…0.25 (1.9…2.2)
	TS-2	TS2		

(1) 105 °C (221 °F), 600V.

Using the default jumper settings, the Bulletin 2094 shunt module's (200 W) internal resistor is enabled and the thermal switch circuitry is not used. Remove the RC connector jumper when wiring to a Bulletin 1394 external shunt module. Remove the TS connector jumper when wiring to the 1394-SR36AF thermal-switch terminals. Refer to the Kinetix Motion Control Selection Guide, publication GMC-SG001, for Bulletin 1394 shunt module catalog numbers. Refer to the Kinetix 6000 Multi-axis Servo Drive User Manual, publication 2094-UM001, for interconnect diagrams.

Shunt Module Jumper Settings

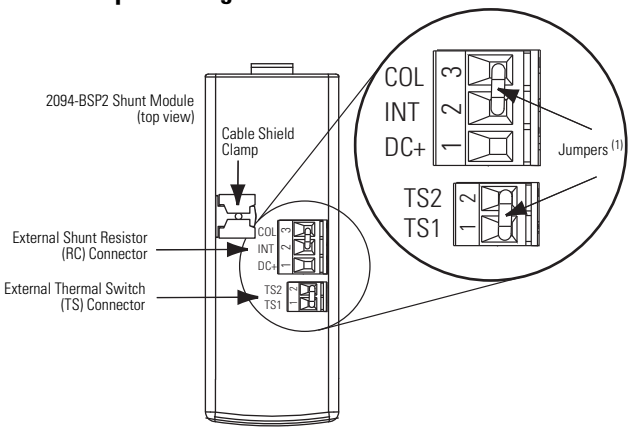

(1) These are the default jumper settings. Refer to External Shunt Modules Installation Instructions, publication 2090-IN004, when removing these jumpers and wiring to a Bulletin 1394 external shunt module.