ACS800-31 drives (5.5 to 110 kW)
ACS800-U31 drives (7.5 to 125 hp)

Hardware manual

Table of contents 

1. Safety instructions 

4. Mechanical installation 

6. Electrical installation 

11. Start-up and use 

3AFE68599954 Rev C
EN
EFFECTIVE: 2023-12-01

© 2023 ABB. All Rights Reserved.

9

Motor control and I/O board (RMIO)

What this chapter contains

This chapter shows
- external control connections to the RMIO board for the ACS800 Standard Control Program (Factory Macro)
- specifications of the inputs and outputs of the board.

Note on terminal labelling

Optional modules (Rxxx) may have identical terminal designations with the RMIO board.

Note on external power supply



WARNING! If the RMIO board is supplied from an external power source via terminal X34, the loose end of the cable removed from the RMIO board terminal must be secured mechanically to a location where it cannot come into contact with electrical parts. If the screw terminal plug of the cable is removed, the wire ends must be individually insulated.

External 24 V power supply for the RMIO board is recommended if
- the application requires a fast start after connecting the input power supply
- fieldbus communication is required when the input power supply is disconnected.

The RMIO board can be supplied from an external power source via terminal X23 or X34 or via both X23 and X34. The internal power supply to terminal X34 can be left connected when using terminal X23.

Parameter settings

In Standard Control Program, set parameter 16.9 CTRL BOARD SUPPLY to EXTERNAL 24V if the RMIO board is powered from an external supply.

External control connections (non-US)

External control cable connections to the RMIO board for the ACS800 Standard Control Program (Factory Macro) are shown below. For external control connections of other application macros and programs, see the appropriate *Firmware Manual*.


RMIO

Terminal block size:

cables 0.3 to 2.5 mm^2 (22 to 14 AWG)

Tightening torque:

0.2 to 0.4 N·m (0.2 to 0.3 lbf·ft)

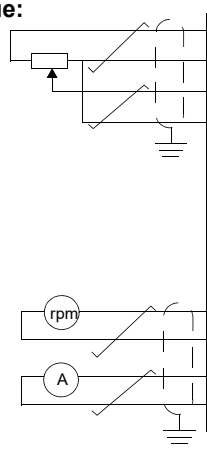

X2*	RMIO		
X20	X20		
1	1	VREF-	Reference voltage -10 VDC, 1 kohm ≤ R_L ≤ 10 kohm
2	2	AGND	
X21	X21		
1	1	VREF+	Reference voltage 10 VDC, 1 kohm ≤ R_L ≤ 10 kohm
2	2	AGND	
3	3	AI1+	Speed reference 0(2) ... 10 V, R_{in} > 200 kohm
4	4	AI1-	
5	5	AI2+	By default, not in use. 0(4) ... 20 mA, R_{in} = 100 ohm
6	6	AI2-	
7	7	AI3+	By default, not in use. 0(4) ... 20 mA, R_{in} = 100 ohm
8	8	AI3-	
9	9	AO1+	Motor speed 0(4)...20 mA ≙ 0...motor nom. speed, R_L ≤ 700 ohm
10	10	AO1-	
11	11	AO2+	Output current 0(4)...20 mA ≙ 0...motor nom. current, R_L ≤ 700 ohm
12	12	AO2-	
X22	X22		
1	1	DI1	Stop/Start
2	2	DI2	Forward/Reverse [1]
3	3	DI3	Not in use
4	4	DI4	Acceleration & deceleration select [2]
5	5	DI5	Constant speed select [3]
6	6	DI6	Constant speed select [3]
7	7	+24VD	+24 VDC max. 100 mA
8	8	+24VD	
9	9	DGND1	Digital ground
10	10	DGND2	Digital ground
11	11	DIIL	Start interlock (0 = stop) [4]
X23	X23		
1	1	+24V	Auxiliary voltage output and input, non-isolated, 24 VDC 250 mA [5]
2	2	GND	
X25	X25		
1	1	RO1	Relay output 1: ready
2	2	RO1	
3	3	RO1	
X26	X26		
1	1	RO2	Relay output 2: running
2	2	RO2	
3	3	RO2	
X27	X27		
1	1	RO3	Relay output 3: fault (-1)
2	2	RO3	
3	3	RO3	

* optional terminal block in ACS800-02 and ACS800-07

[1] Only effective if par. 10.03 is set to REQUEST by the user.

[2] 0 = open, 1 = closed

DI4	Ramp times according to
0	parameters 22.02 and 22.03
1	parameters 22.04 and 22.05

[3] See par. group 12 CONSTANT SPEEDS.

DI5	DI6	Operation
0	0	Set speed through AI1
1	0	Constant speed 1
0	1	Constant speed 2
1	1	Constant speed 3

[4] See parameter 21.09 START INTRL FUNC.

[5] Total maximum current shared between this output and optional modules installed on the board.

Fault

External control connections (US)

External control cable connections to the RMIO board for the ACS800 Standard Control Program (Factory Macro US version) are shown below. For external control connections of other application macros and programs, see the appropriate *Firmware Manual*.


RMIO

Terminal block size:


cables 0.3 to 2.5 mm^2 (22 to 14 AWG)

Tightening torque:

0.2 to 0.4 N·m (0.2 to 0.3 lbf·ft)

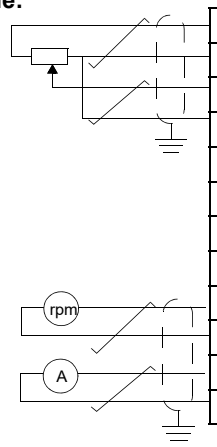

X2*	RMIO		
X20	X20		
1	1	VREF-	Reference voltage -10 VDC, 1 kohm ≤ R_L ≤ 10 kohm
2	2	AGND	
X21	X21		
1	1	VREF+	Reference voltage 10 VDC, 1 kohm ≤ R_L ≤ 10 kohm
2	2	AGND	
3	3	AI1+	Speed reference 0(2) ... 10 V, R_{in} > 200 kohm
4	4	AI1-	
5	5	AI2+	By default, not in use. 0(4) ... 20 mA, R_{in} = 100 ohm
6	6	AI2-	
7	7	AI3+	By default, not in use. 0(4) ... 20 mA, R_{in} = 100 ohm
8	8	AI3-	
9	9	AO1+	Motor speed 0(4)...20 mA ≙ 0...motor nom. speed, R_L ≤ 700 ohm
10	10	AO1-	
11	11	AO2+	Output current 0(4)...20 mA ≙ 0...motor nom. current, R_L ≤ 700 ohm
12	12	AO2-	
X22	X22		
1	1	DI1	Start (⌐‾)
2	2	DI2	Stop (‾⌐)
3	3	DI3	Forward/Reverse [1]
4	4	DI4	Acceleration & deceleration select [2]
5	5	DI5	Constant speed select [3]
6	6	DI6	Constant speed select [3]
7	7	+24VD	+24 VDC max. 100 mA
8	8	+24VD	
9	9	DGND1	Digital ground
10	10	DGND2	Digital ground
11	11	DIIL	Start interlock (0 = stop) [4]
X23	X23		
1	1	+24V	Auxiliary voltage output and input, non-isolated, 24 VDC 250 mA [5]
2	2	GND	
X25	X25		
1	1	RO1	Relay output 1: ready
2	2	RO1	
3	3	RO1	
X26	X26		
1	1	RO2	Relay output 2: running
2	2	RO2	
3	3	RO2	
X27	X27		
1	1	RO3	Relay output 3: fault (-1)
2	2	RO3	
3	3	RO3	



* optional terminal block in ACS800-U2 and ACS800-U7

[1] Only effective if par. 10.03 is set to REQUEST by the user.

[2] 0 = open, 1 = closed

DI4	Ramp times according to
0	parameters 22.02 and 22.03
1	parameters 22.04 and 22.05

[3] See par. group 12 CONSTANT SPEEDS.

DI5	DI6	Operation
0	0	Set speed through AI1
1	0	Constant speed 1
0	1	Constant speed 2
1	1	Constant speed 3

[4] See parameter 21.09 START INTRL FUNC.

[5] Total maximum current shared between this output and optional modules installed on the board.

RMIO board specifications

Analogue inputs

	Two programmable differential current inputs (0 mA / 4 mA ... 20 mA, R_{in} = 100 ohm) and one programmable differential voltage input (-10 V / 0 V / 2 V ... +10 V, R_{in} > 200 kohm). The analogue inputs are galvanically isolated as a group.
Isolation test voltage	500 V AC, 1 min
Max. common mode voltage between the channels	±15 V DC
Common mode rejection ratio	≥ 60 dB at 50 Hz
Resolution	0.025% (12-bit) for the -10 V ... +10 V input. 0.5% (11-bit) for the 0 ... +10 V and 0 ... 20 mA inputs.
Inaccuracy	± 0.5% (Full Scale Range) at 25 °C (77 °F). Temperature coefficient: ± 100 ppm/°C (± 56 ppm/°F), max.

Constant voltage output

Voltage	+10 V DC, 0, -10 V DC ± 0.5% (Full Scale Range) at 25 °C (77 °F). Temperature coefficient: ± 100 ppm/°C (± 56 ppm/°F) max.
Maximum load	10 mA
Applicable potentiometer	1 kohm to 10 kohm

Auxiliary power output

Voltage	24 V DC ± 10%, short circuit proof
Maximum current	250 mA (shared between this output and optional modules installed on the RMIO)

Analogue outputs

	Two programmable current outputs: 0 (4) to 20 mA, R_L ≤ 700 ohm
Resolution	0.1% (10-bit)
Inaccuracy	± 1% (Full Scale Range) at 25 °C (77 °F). Temperature coefficient: ± 200 ppm/°C (± 111 ppm/°F) max.

Digital inputs

	Six programmable digital inputs (common ground: 24 V DC, -15% to +20%) and a start interlock input. Group isolated, can be divided in two isolated groups (see *Isolation and grounding diagram* below). Thermistor input: 5 mA, < 1.5 kohm ⏏ “1” (normal temperature), > 4 kohm ⏏ “0” (high temperature), open circuit ⏏ “0” (high temperature). Internal supply for digital inputs (+24 V DC): short-circuit proof. An external 24 V DC supply can be used instead of the internal supply.
Isolation test voltage	500 V AC, 1 min
Logical thresholds	< 8 V DC ⏏ “0”, > 12 V DC ⏏ “1”
Input current	DI1 to DI 5: 10 mA, DI6: 5 mA
Filtering time constant	1 ms

Relay outputs

	Three programmable relay outputs
Switching capacity	8 A at 24 V DC or 250 V AC, 0.4 A at 120 V DC
Minimum continuous current	5 mA rms at 24 V DC
Maximum continuous current	2 A rms
Isolation test voltage	4 kV AC, 1 minute

DDCS fiber-optic link

	With optional communication adapter module RDCO. Protocol: DDCS (ABB Distributed Drives Communication System)

24 VDC power input

Voltage	24 V DC ± 10%
Typical current consumption (without optional modules)	250 mA
Maximum current consumption	1200 mA (with optional modules inserted)

The terminals on the RMIO board as well as on the optional modules attachable to the board fulfill the Protective Extra Low Voltage (PELV) requirements stated in EN 50178 provided that the external circuits connected to the terminals also fulfill the requirements and the installation site is below 2000 m (6562 ft). Above 2000 m (6562 ft), see page 67.

Isolation and grounding diagram

